



Hähnel Industries Ltd.  
Parnell Street  
Bandon  
Co. Cork

Tel: +353 23 41606  
Fax: +353 23 44963

[www.hahnel.ie](http://www.hahnel.ie)

# Cross Reference Guide

---

**Referenzliste**

---

**Guide des References**

---

| Vendor | Camera Type   | Camera Model  | Original Battery | Hahnel Battery    |
|--------|---------------|---------------|------------------|-------------------|
| Agfa   | DIGITALCAMERA | DC-600uw      | AA               | AA Mignon 2700mAh |
| Agfa   | DIGITALCAMERA | DC-600uw      | AA               | Go                |
| Agfa   | DIGITALCAMERA | e PHOTO 780   | AA               | AA Mignon 2700mAh |
| Agfa   | DIGITALCAMERA | e PHOTO CL 18 | AA               | AA Mignon 2700mAh |
| Agfa   | DIGITALCAMERA | e PHOTO CL 20 | AA               | AA Mignon 2700mAh |
| Agfa   | DIGITALCAMERA | e PHOTO CL 34 | AA               | AA Mignon 2700mAh |
| BenQ   | DIGITALCAMERA | C30           | AA               | AA Mignon 2700mAh |
| BenQ   | DIGITALCAMERA | C40           | AA               | AA Mignon 2700mAh |
| BenQ   | DIGITALCAMERA | C51           | AA               | AA Mignon 2700mAh |
| BenQ   | DIGITALCAMERA | C62           | AA               | AA Mignon 2700mAh |
| BenQ   | DIGITALCAMERA | DC1300        | AA               | AA Mignon 2700mAh |
| BenQ   | DIGITALCAMERA | DC1500        | AA               | AA Mignon 2700mAh |
| BenQ   | DIGITALCAMERA | DC2110        | AA               | AA Mignon 2700mAh |
| BenQ   | DIGITALCAMERA | DC2300        | AA               | AA Mignon 2700mAh |
| BenQ   | DIGITALCAMERA | DC3450        | AA               | AA Mignon 2700mAh |
| BenQ   | DIGITALCAMERA | E30           | AA               | AA Mignon 2700mAh |
| Canon  | CAMCORDER     | DC10          | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC100         | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC19          | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC20          | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC201         | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC21          | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC22          | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC220         | AA               | Go                |
| Canon  | CAMCORDER     | DC230         | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC230         | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC301         | NB-2L14          | HL-2L14           |
| Canon  | CAMCORDER     | DC301         | NB-2L14          | HL-2L14           |
| Canon  | CAMCORDER     | DC301         | BP-2L24          | HL-2L24           |
| Canon  | CAMCORDER     | DC320         | NB-2L14          | HL-2L14           |
| Canon  | CAMCORDER     | DC330         | NB-2L14          | HL-2L14           |
| Canon  | CAMCORDER     | DC40          | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC410         | NB-2L/2LH        | HL-2L             |
| Canon  | CAMCORDER     | DC410         | NB-2L14          | HL-2L14           |
| Canon  | CAMCORDER     | DC410         | NB-2LH           | HL-2LHP           |
| Canon  | CAMCORDER     | DC411         | NB-2L14          | HL-2L14           |
| Canon  | CAMCORDER     | DC411         | BP-2L24          | HL-2L24           |
| Canon  | CAMCORDER     | DC420         | NB-2L/2LH        | HL-2L             |
| Canon  | CAMCORDER     | DC420         | NB-2L14          | HL-2L14           |
| Canon  | CAMCORDER     | DC420         | NB-2LH           | HL-2LHP           |
| Canon  | CAMCORDER     | DC50          | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC50          | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DC95          | BP-208           | HL-208            |
| Canon  | CAMCORDER     | DVMV20        | BP-608/617       | HL-617            |
| Canon  | CAMCORDER     | ELURA         | BP-608/617       | HL-617            |
| Canon  | CAMCORDER     | ELURA 40MC    | NB-2L14          | HL-2L14           |
| Canon  | CAMCORDER     | ELURA 80      | NB-2L14          | HL-2L14           |
| Canon  | CAMCORDER     | ELURA 85      | NB-2L14          | HL-2L14           |
| Canon  | CAMCORDER     | ELURA 90      | NB-2L14          | HL-2L14           |
| Canon  | CAMCORDER     | ES300V        | BP-915           | HL-916            |
| Canon  | CAMCORDER     | ES300V        | Bp-945           | HL-945            |
| Canon  | CAMCORDER     | ES300V        | BP-970           | HL-970            |
| Canon  | CAMCORDER     | ES4000        | BP-915           | HL-916            |
| Canon  | CAMCORDER     | ES4000        | Bp-945           | HL-945            |
| Canon  | CAMCORDER     | ES4000        | BP-970           | HL-970            |
| Canon  | CAMCORDER     | ES410V        | BP-915           | HL-916            |
| Canon  | CAMCORDER     | ES410V        | Bp-945           | HL-945            |
| Canon  | CAMCORDER     | ES410V        | BP-970           | HL-970            |
| Canon  | CAMCORDER     | ES420         | BP-915           | HL-916            |
| Canon  | CAMCORDER     | ES420         | Bp-945           | HL-945            |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Canon         | CAMCORDER          | ES420               | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES50                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES50                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES50                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES5000              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES5000              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES5000              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES520A              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES520A              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES520A              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES60                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES60                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES60                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES6000              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES6000              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES6000              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES65                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES65                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES65                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES7000V             | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES7000V             | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES7000V             | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES75                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES75                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES75                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES8100HI8           | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES8100HI8           | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES8100HI8           | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES8100V             | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES8100V             | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES8100V             | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES8200V             | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES8200V             | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES8200V             | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES8400              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES8400              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES8400              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ES8600              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ES8600              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ES8600              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | FS100               | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | FS11                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | FS20                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | FS200               | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | FS21                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | FS22                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | FS30                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | FS300               | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | FS31                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | FV40                | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | FV40                | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | FV400               | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | FV400               | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | G10                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | G10                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | G10                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | G1000               | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | G1000               | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | G1000               | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | G10HI               | BP-915                  | HL-916                |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Canon         | CAMCORDER          | G10HI               | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | G10HI               | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | G15                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | G15                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | G15                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | G1500               | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | G1500               | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | G1500               | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | G20                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | G20                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | G20                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | G2000               | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | G2000               | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | G2000               | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | G30                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | G30                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | G30                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | G35                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | G35                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | G35                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | G45                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | G45                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | G45                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | GL1                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | GL1                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | GL1                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | GL2                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | GL2                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | GL2                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | HF10                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF100               | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF11                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF20                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF20                | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF200               | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF200               | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF-M30              | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF-M30              | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF-M300             | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF-M300             | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF-M306             | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF-M306             | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF-M31              | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF-M31              | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF-M336             | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF-M336             | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF-R10              | NB-2L/2LH               | HL-2L                 |
| Canon         | CAMCORDER          | HF-R10              | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HF-R10              | BP-2L24                 | HL-2L24               |
| Canon         | CAMCORDER          | HF-R100             | NB-2L/2LH               | HL-2L                 |
| Canon         | CAMCORDER          | HF-R100             | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HF-R100             | BP-2L24                 | HL-2L24               |
| Canon         | CAMCORDER          | HF-R106             | NB-2L/2LH               | HL-2L                 |
| Canon         | CAMCORDER          | HF-R106             | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HF-R106             | BP-2L24                 | HL-2L24               |
| Canon         | CAMCORDER          | HF-R16              | NB-2L/2LH               | HL-2L                 |
| Canon         | CAMCORDER          | HF-R16              | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HF-R16              | BP-2L24                 | HL-2L24               |
| Canon         | CAMCORDER          | HF-R17              | NB-2L/2LH               | HL-2L                 |
| Canon         | CAMCORDER          | HF-R17              | NB-2L14                 | HL-2L14               |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Canon         | CAMCORDER          | HF-R17              | BP-2L24                 | HL-2L24               |
| Canon         | CAMCORDER          | HF-R18              | NB-2L/2LH               | HL-2L                 |
| Canon         | CAMCORDER          | HF-R18              | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HF-R18              | BP-2L24                 | HL-2L24               |
| Canon         | CAMCORDER          | HF-S10              | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF-S10              | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF-S100             | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF-S100             | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF-S11              | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF-S11              | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF-S20              | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF-S20              | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF-S200             | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF-S200             | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HF-S21              | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HF-S21              | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HG10                | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HG20                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HG20                | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HG21                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HG21                | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HR10                | BP-808                  | HL-C808               |
| Canon         | CAMCORDER          | HR10                | BP-819                  | HL-C819               |
| Canon         | CAMCORDER          | HR-R11              | NB-2L/2LH               | HL-2L                 |
| Canon         | CAMCORDER          | HR-R11              | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HR-R11              | BP-2L24                 | HL-2L24               |
| Canon         | CAMCORDER          | HV10                | BP-315                  | HL-315                |
| Canon         | CAMCORDER          | HV-20               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HV30                | NB-2L/2LH               | HL-2L                 |
| Canon         | CAMCORDER          | HV30                | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HV30                | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HV30                | BP-2L24                 | HL-2L24               |
| Canon         | CAMCORDER          | HV30                | NB-2LH                  | HL-2LHP               |
| Canon         | CAMCORDER          | HV30 HDV            | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HV40                | NB-2L/2LH               | HL-2L                 |
| Canon         | CAMCORDER          | HV40                | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | HV40                | BP-2L24                 | HL-2L24               |
| Canon         | CAMCORDER          | HV40                | NB-2LH                  | HL-2LHP               |
| Canon         | CAMCORDER          | Ixy DV S1           | BP-208                  | HL-208                |
| Canon         | CAMCORDER          | MD101               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | MD110               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | MD160               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | MD160               | BP-2L24                 | HL-2L24               |
| Canon         | CAMCORDER          | MD205               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | MD215               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | MD215               | BP-2L24                 | HL-2L24               |
| Canon         | CAMCORDER          | MD235               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | MV1                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | MV1                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | MV1                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | MV10                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | MV10                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | MV10                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | MV20                | BP-608/617              | HL-617                |
| Canon         | CAMCORDER          | MV200               | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | MV30                | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | MV30                | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | MV300               | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | MV300               | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | MV300i              | BP-511                  | HL-511                |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Canon         | CAMCORDER          | <b>MV300i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV30i</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV30i</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV400</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV400</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV400i</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV400i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV430</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV430</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV430i</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV430i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV450</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV450</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV450i</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV450i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV5</b>          | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV500</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV500</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV530i</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV530i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV550</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV550</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV550i</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV550i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV5i</b>         | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV5iMC</b>       | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV6</b>          | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV600</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV600</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV600i</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV600i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV630</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV630</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV630i</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV630i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV650</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV650</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV650i</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV650i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV6i</b>         | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV6iMC</b>       | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV700</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV700</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV700i</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV700i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV730</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV730</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV730i</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV730i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV750</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV750</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV750i</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MV750i</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MV800</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV830</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV850</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV880X</b>       | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV890</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV890</b>        | BP-2L24                 | <b>HL-2L24</b>        |
| Canon         | CAMCORDER          | <b>MV890</b>        | NB-2LH                  | <b>HL-2LHP</b>        |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Canon         | CAMCORDER          | <b>MV900</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV901</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV930</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV950</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MV960</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX100</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MVX100</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MVX100i</b>      | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MVX100i</b>      | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MVX150</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MVX150</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MVX150i</b>      | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MVX150i</b>      | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MVX20</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX200</b>       | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX250</b>       | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX25i</b>       | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX2i</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MVX2i</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MVX30</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX300</b>       | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX330</b>       | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX35</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX350</b>       | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX3i</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MVX3i</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>MVX40</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX400</b>       | BP-208                  | <b>HL-208</b>         |
| Canon         | CAMCORDER          | <b>MVX45</b>        | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>MVX450</b>       | BP-208                  | <b>HL-208</b>         |
| Canon         | CAMCORDER          | <b>MVX460</b>       | BP-208                  | <b>HL-208</b>         |
| Canon         | CAMCORDER          | <b>MVXLi</b>        | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>MVXLi</b>        | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>OPTURA</b>       | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>OPTURA</b>       | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>Optura 100MC</b> | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>Optura 100MC</b> | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>Optura 200MC</b> | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>Optura 200MC</b> | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>OPTURA 500</b>   | NB-2L14                 | <b>HL-2L14</b>        |
| Canon         | CAMCORDER          | <b>Optura Pi</b>    | BP-511                  | <b>HL-511</b>         |
| Canon         | CAMCORDER          | <b>Optura Pi</b>    | BP-522                  | <b>HL-522</b>         |
| Canon         | CAMCORDER          | <b>OPTURA S1</b>    | BP-208                  | <b>HL-208</b>         |
| Canon         | CAMCORDER          | <b>UCV100</b>       | BP-915                  | <b>HL-916</b>         |
| Canon         | CAMCORDER          | <b>UCV100</b>       | Bp-945                  | <b>HL-945</b>         |
| Canon         | CAMCORDER          | <b>UCV100</b>       | BP-970                  | <b>HL-970</b>         |
| Canon         | CAMCORDER          | <b>UCV10HI</b>      | BP-915                  | <b>HL-916</b>         |
| Canon         | CAMCORDER          | <b>UCV10HI</b>      | Bp-945                  | <b>HL-945</b>         |
| Canon         | CAMCORDER          | <b>UCV10HI</b>      | BP-970                  | <b>HL-970</b>         |
| Canon         | CAMCORDER          | <b>UCV200</b>       | BP-915                  | <b>HL-916</b>         |
| Canon         | CAMCORDER          | <b>UCV200</b>       | Bp-945                  | <b>HL-945</b>         |
| Canon         | CAMCORDER          | <b>UCV200</b>       | BP-970                  | <b>HL-970</b>         |
| Canon         | CAMCORDER          | <b>UCV20HI</b>      | BP-915                  | <b>HL-916</b>         |
| Canon         | CAMCORDER          | <b>UCV20HI</b>      | Bp-945                  | <b>HL-945</b>         |
| Canon         | CAMCORDER          | <b>UCV20HI</b>      | BP-970                  | <b>HL-970</b>         |
| Canon         | CAMCORDER          | <b>UCV30HI</b>      | BP-915                  | <b>HL-916</b>         |
| Canon         | CAMCORDER          | <b>UCV30HI</b>      | Bp-945                  | <b>HL-945</b>         |
| Canon         | CAMCORDER          | <b>UCV30HI</b>      | BP-970                  | <b>HL-970</b>         |
| Canon         | CAMCORDER          | <b>UCX2</b>         | BP-915                  | <b>HL-916</b>         |
| Canon         | CAMCORDER          | <b>UCX2</b>         | Bp-945                  | <b>HL-945</b>         |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Canon         | CAMCORDER          | UCX2                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | UCX2HI              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | UCX2HI              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | UCX2HI              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | UCX30HI             | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | UCX30HI             | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | UCX30HI             | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | UCX3HI              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | UCX3HI              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | UCX3HI              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | UCX40HI             | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | UCX40HI             | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | UCX40HI             | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | UCX45HI             | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | UCX45HI             | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | UCX45HI             | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | UCX55HI             | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | UCX55HI             | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | UCX55HI             | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ULTURA              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | ULTURA              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | ULTURA              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V20                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V20                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V20                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V200                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V200                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V200                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V30                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V30                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V30                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V300                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V300                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V300                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V40                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V40                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V40                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V400                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V400                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V400                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V40HI               | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V40HI               | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V40HI               | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V420                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V420                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V420                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V50                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V50                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V50                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V500                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V500                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V500                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V520                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V520                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V520                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V60                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V60                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V60                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V65                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V65                 | Bp-945                  | HL-945                |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Canon         | CAMCORDER          | V65                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | V75                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | V75                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | V75                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | VISTURA             | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | VISTURA             | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | VISTURA             | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | X1 Hi               | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | X1 Hi               | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | X1 Hi               | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | X150i               | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | X150i               | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | X2 Hi               | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | X2 Hi               | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | X2 Hi               | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | X30 Hi              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | X30 Hi              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | X30 Hi              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | X40 Hi              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | X40 Hi              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | X40 Hi              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | X45 Hi              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | X45 Hi              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | X45 Hi              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | X50 Hi              | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | X50 Hi              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | X50 Hi              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XH-A1 Pro           | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XHA1 PRO            | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | XHA1 PRO            | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XH-G1 Pro           | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XHG1 PRO            | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | XHG1 PRO            | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XH-H1 Pro           | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XL1                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | XL1                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | XL1                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XL1S                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | XL1S                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | XL1S                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XL2                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | XL2                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | XL2                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | PRO                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | PRO                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XLH1 PRO HDV        | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | XLH1 PRO HDV        | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | XLH1 PRO HDV        | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XL-H1A              | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | XL-H1A              | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XLM2                | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | XLM2                | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | XLM2                | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XM1                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | XM1                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | XM1                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | XM2                 | BP-915                  | HL-916                |
| Canon         | CAMCORDER          | XM2                 | Bp-945                  | HL-945                |
| Canon         | CAMCORDER          | XM2                 | BP-970                  | HL-970                |
| Canon         | CAMCORDER          | ZR                  | BP-608/617              | HL-617                |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Canon         | CAMCORDER          | ZR10                | BP-608/617              | HL-617                |
| Canon         | CAMCORDER          | ZR100               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR100               | BP-608/617              | HL-617                |
| Canon         | CAMCORDER          | ZR20                | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | ZR20                | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | ZR200               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR25mc              | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | ZR25mc              | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | ZR300               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR30mc              | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | ZR30mc              | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | ZR40                | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | ZR40                | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | ZR400               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR45                | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | ZR45                | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | ZR50                | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | ZR50                | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | ZR500               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR50MC              | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | ZR50MC              | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | ZR600               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR60MC              | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | ZR60MC              | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | ZR700               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR80                | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | ZR80                | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | ZR800               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR830               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR85                | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | ZR85                | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | ZR850               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR90                | BP-511                  | HL-511                |
| Canon         | CAMCORDER          | ZR90                | BP-522                  | HL-522                |
| Canon         | CAMCORDER          | ZR900               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR930               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR950               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR960               | NB-2L/2LH               | HL-2L                 |
| Canon         | CAMCORDER          | ZR960               | NB-2L14                 | HL-2L14               |
| Canon         | CAMCORDER          | ZR960               | NB-2LH                  | HL-2LHP               |
| Canon         | CAMCORDER          | ZRCV11              | BP-608/617              | HL-617                |
| Canon         | DIGITALCAMERA      | IXUS 95 IS          | NB-6L                   | HL-6L                 |
| Canon         | DIGITALCAMERA      | A10                 | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A100                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A1000 IS            | AA                      | Go                    |
| Canon         | DIGITALCAMERA      | A20                 | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A200                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A2000 IS            | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A30                 | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A300                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A3000 IS            | NB-8L                   | HL-8L                 |
| Canon         | DIGITALCAMERA      | A310                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A3100 IS            | NB-8L                   | HL-8L                 |
| Canon         | DIGITALCAMERA      | A40                 | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A40                 | D-Li68                  | HL-PL68               |
| Canon         | DIGITALCAMERA      | A400                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A410                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A420                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A430                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A450                | AA                      | AA Mignon 2700mAh     |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Canon         | DIGITALCAMERA      | A460                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A470                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A480                | AA                      | AA Mignon 2350mAh     |
| Canon         | DIGITALCAMERA      | A480                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A480                | AA                      | Go                    |
| Canon         | DIGITALCAMERA      | A490                | AA                      | AA Mignon 2350mAh     |
| Canon         | DIGITALCAMERA      | A490                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A490                | AA                      | Go                    |
| Canon         | DIGITALCAMERA      | A495                | AA                      | AA Mignon 2350mAh     |
| Canon         | DIGITALCAMERA      | A495                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A495                | AA                      | Go                    |
| Canon         | DIGITALCAMERA      | A5                  | NB-5H                   | HN-5H                 |
| Canon         | DIGITALCAMERA      | A50                 | NB-5H                   | HN-5H                 |
| Canon         | DIGITALCAMERA      | A510                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A520                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A530                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A540                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A550                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A560                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A570                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A580                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A590 IS             | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A60                 | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A610                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A620                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A630                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A640                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A650 IS             | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A70                 | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A700                | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A710IS              | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A720 IS             | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A75                 | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A80                 | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A85                 | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | A95                 | AA                      | AA Mignon 2700mAh     |
| Canon         | DIGITALCAMERA      | EOS 1000D SLR       | LP-E5                   | HL-E5                 |
| Canon         | DIGITALCAMERA      | EOS 10DS            | BP-511                  | HL-511                |
| Canon         | DIGITALCAMERA      | EOS 1D SLR          | NP-E3                   | HN-E3                 |
| Canon         | DIGITALCAMERA      | EOS 1D Mark II      | NP-E3                   | HN-E3                 |
| Canon         | DIGITALCAMERA      | EOS 1DS             | NP-E3                   | HN-E3                 |
| Canon         | DIGITALCAMERA      | EOS 1DS Mark II     | LP-E4                   | HL-E4                 |
| Canon         | DIGITALCAMERA      | EOS 1DS Mark II     | NP-E3                   | HN-E3                 |
| Canon         | DIGITALCAMERA      | EOS 1DS Mark IV     | LP-E4                   | HL-E4                 |
| Canon         | DIGITALCAMERA      | EOS 20D             | BP-511                  | HL-511                |
| Canon         | DIGITALCAMERA      | EOS 300D            | BP-511                  | HL-511                |
| Canon         | DIGITALCAMERA      | EOS 30d             | BP-511                  | HL-511                |
| Canon         | DIGITALCAMERA      | EOS 30D             | BP-511                  | HL-511                |
| Canon         | DIGITALCAMERA      | EOS 350D            | NB-2LH                  | HL-2LHP               |
| Canon         | DIGITALCAMERA      | EOS 350D GRIP       | NB-2LH                  | HL-2LHP               |
| Canon         | DIGITALCAMERA      | EOS 400D            | NB-2LH                  | HL-2LHP               |
| Canon         | DIGITALCAMERA      | EOS 40D             | BP-511                  | HL-511                |
| Canon         | DIGITALCAMERA      | EOS 450D SLR        | LP-E5                   | HL-E5                 |
| Canon         | DIGITALCAMERA      | EOS 500D SLR        | LP-E5                   | HL-E5                 |
| Canon         | DIGITALCAMERA      | EOS 50D SLR         | BP-511                  | HL-511                |
| Canon         | DIGITALCAMERA      | EOS 550D SLR        | LP-E8                   | HL-E8                 |
| Canon         | DIGITALCAMERA      | EOS 5D              | BP-511                  | HL-511                |
| Canon         | DIGITALCAMERA      | EOS D10             | BP-511                  | HL-511                |
| Canon         | DIGITALCAMERA      | EOS D60             | BP-511                  | HL-511                |
| Canon         | DIGITALCAMERA      | EOS-1D Mark II N    | NP-E3                   | HN-E3                 |

| Vendor | Camera Type   | Camera Model        | Original Battery | Hahnel Battery |
|--------|---------------|---------------------|------------------|----------------|
| Canon  | DIGITALCAMERA | SLR                 | LP-E4            | HL-E4          |
| Canon  | DIGITALCAMERA | G1                  | BP-511           | HL-511         |
| Canon  | DIGITALCAMERA | G2                  | BP-511           | HL-511         |
| Canon  | DIGITALCAMERA | G3                  | BP-511           | HL-511         |
| Canon  | DIGITALCAMERA | G3                  | NP-60            | HL-F60         |
| Canon  | DIGITALCAMERA | G5                  | BP-511           | HL-511         |
| Canon  | DIGITALCAMERA | G6                  | NB-2LH           | HL-2LHP        |
| Canon  | DIGITALCAMERA | G6                  | BP-511           | HL-511         |
| Canon  | DIGITALCAMERA | G9                  | NB-2LH           | HL-2LHP        |
| Canon  | DIGITALCAMERA | Ixus                | NB-1LH           | HL-1LHP        |
| Canon  | DIGITALCAMERA | IXUS 100 IS         | NB-4L            | HL-4L          |
| Canon  | DIGITALCAMERA | IXUS 100 IS         | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | IXUS 105            | NB-6L            | HL-6L          |
| Canon  | DIGITALCAMERA | IXUS 110 IS         | NB-4L            | HL-4L          |
| Canon  | DIGITALCAMERA | IXUS 110 IS         | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | IXUS 120 IS         | NB-4L            | HL-4L          |
| Canon  | DIGITALCAMERA | IXUS 120 IS         | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | IXUS 130            | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | IXUS 200 IS         | NB-6L            | HL-6L          |
| Canon  | DIGITALCAMERA | IXUS 210            | NB-6L            | HL-6L          |
| Canon  | DIGITALCAMERA | Ixus 30             | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | Ixus 300            | NB-1LH           | HL-1LHP        |
| Canon  | DIGITALCAMERA | Ixus 330            | NB-1LH           | HL-1LHP        |
| Canon  | DIGITALCAMERA | Ixus 40             | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | Ixus 400            | NB-1LH           | HL-1LHP        |
| Canon  | DIGITALCAMERA | Ixus 430            | NB-1LH           | HL-1LHP        |
| Canon  | DIGITALCAMERA | Ixus 50             | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | Ixus 500            | NB-1LH           | HL-1LHP        |
| Canon  | DIGITALCAMERA | IXUS 55             | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | Ixus 60             | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | Ixus 65             | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | IXUS 70             | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | Ixus 700            | NB-3L            | HL-3L          |
| Canon  | DIGITALCAMERA | IXUS 75             | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | IXUS 750            | NB-3L            | HL-3L          |
| Canon  | DIGITALCAMERA | IXUS 80 IS          | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | Ixus 800 IS         | NB-5L            | HL-5L          |
| Canon  | DIGITALCAMERA | IXUS 85             | NB-6L            | HL-6L          |
| Canon  | DIGITALCAMERA | Ixus 850            | NB-2LH           | HL-2LHP        |
| Canon  | DIGITALCAMERA | IXUS 870 IS         | NB-5L            | HL-5L          |
| Canon  | DIGITALCAMERA | IXUS 870 IS         | NB-5L            | HL-5LHP        |
| Canon  | DIGITALCAMERA | IXUS 90             | NB-5L            | HL-5L          |
| Canon  | DIGITALCAMERA | Ixus 900            | NB-5L            | HL-5L          |
| Canon  | DIGITALCAMERA | IXUS 970            | NB-5L            | HL-5L          |
| Canon  | DIGITALCAMERA | IXUS 980 IS         | NB-5L            | HL-5L          |
| Canon  | DIGITALCAMERA | IXUS 980 IS         | NB-5L            | HL-5LHP        |
| Canon  | DIGITALCAMERA | IXUS 990 IS         | NB-5L            | HL-5L          |
| Canon  | DIGITALCAMERA | IXUS 990 IS         | NB-5L            | HL-5LHP        |
| Canon  | DIGITALCAMERA | Ixus i              | NB-4L            | HL-4L          |
| Canon  | DIGITALCAMERA | Ixus i              | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | Ixus i5             | NB-3L            | HL-3L          |
| Canon  | DIGITALCAMERA | IXUS I7             | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | Ixus II             | NB-3L            | HL-3L          |
| Canon  | DIGITALCAMERA | Ixus IIs            | NB-3L            | HL-3L          |
| Canon  | DIGITALCAMERA | Ixus V              | NB-1LH           | HL-1LHP        |
| Canon  | DIGITALCAMERA | Ixus V2             | NB-1LH           | HL-1LHP        |
| Canon  | DIGITALCAMERA | Ixus V3             | NB-1LH           | HL-1LHP        |
| Canon  | DIGITALCAMERA | IXUS WIRELESS       | NB-4L            | HL-4LHP        |
| Canon  | DIGITALCAMERA | M30 (Media Storage) | BP-511           | HL-511         |
| Canon  | DIGITALCAMERA | M80 (Media Storage) | BP-511           | HL-511         |

| Vendor | Camera Type   | Camera Model        | Original Battery | Hahnel Battery    |
|--------|---------------|---------------------|------------------|-------------------|
| Canon  | DIGITALCAMERA | P90                 | BP-511           | HL-511            |
| Canon  | DIGITALCAMERA | PowerShot A1100 IS  | AA               | AA Mignon 2350mAh |
| Canon  | DIGITALCAMERA | PowerShot A1100 IS  | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | PowerShot A1100 IS  | AA               | Go                |
| Canon  | DIGITALCAMERA | PowerShot A2100 IS  | AA               | AA Mignon 2350mAh |
| Canon  | DIGITALCAMERA | PowerShot A2100 IS  | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | PowerShot A2100 IS  | AA               | Go                |
| Canon  | DIGITALCAMERA | PowerShot D10       | NB-6L            | HL-6L             |
| Canon  | DIGITALCAMERA | Powershot E1        | AA               | AA Mignon 2350mAh |
| Canon  | DIGITALCAMERA | Powershot E1        | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | Powershot E1        | AA               | Go                |
| Canon  | DIGITALCAMERA | POWERSHOT G10       | NB-7L            | HL-7L             |
| Canon  | DIGITALCAMERA | PowerShot G11       | NB-7L            | HL-7L             |
| Canon  | DIGITALCAMERA | PowerShot G7        | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | PowerShot S90       | NB-6L            | HL-6L             |
| Canon  | DIGITALCAMERA | PowerShot SD1200 IS | NB-6L            | HL-6L             |
| Canon  | DIGITALCAMERA | PowerShot SD780 IS  | NB-4L            | HL-4L             |
| Canon  | DIGITALCAMERA | PowerShot SD780 IS  | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | PowerShot SD880 IS  | NB-5L            | HL-5LHP           |
| Canon  | DIGITALCAMERA | PowerShot SD960 IS  | NB-4L            | HL-4L             |
| Canon  | DIGITALCAMERA | PowerShot SD960 IS  | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | PowerShot SD970 IS  | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | PowerShot SD970 IS  | NB-5L            | HL-5LHP           |
| Canon  | DIGITALCAMERA | PowerShot SD990 IS  | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | PowerShot SD990 IS  | NB-5L            | HL-5LHP           |
| Canon  | DIGITALCAMERA | PowerShot SX1 IS    | AA               | Go                |
| Canon  | DIGITALCAMERA | Powershot SX10 IS   | AA               | AA Mignon 2350mAh |
| Canon  | DIGITALCAMERA | Powershot SX10 IS   | AA               | Go                |
| Canon  | DIGITALCAMERA | PowerShot SX120 IS  | AA               | AA Mignon 2350mAh |
| Canon  | DIGITALCAMERA | PowerShot SX120 IS  | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | PowerShot SX120 IS  | AA               | Go                |
| Canon  | DIGITALCAMERA | PowerShot SX20 IS   | AA               | AA Mignon 2350mAh |
| Canon  | DIGITALCAMERA | PowerShot SX20 IS   | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | PowerShot SX20 IS   | AA               | Go                |
| Canon  | DIGITALCAMERA | PowerShot SX200     | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | PowerShot SX200     | NB-5L            | HL-5LHP           |
| Canon  | DIGITALCAMERA | Pro 1               | BP-511           | HL-511            |
| Canon  | DIGITALCAMERA | PRO 70              | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | Pro 90IS            | BP-511           | HL-511            |
| Canon  | DIGITALCAMERA | Rebel T1i DSLR      | LP-E5            | HL-E5             |
| Canon  | DIGITALCAMERA | SLR                 | LP-E8            | HL-E8             |
| Canon  | DIGITALCAMERA | Rebel XS            | LP-E5            | HL-E5             |
| Canon  | DIGITALCAMERA | REBEL Xsi           | LP-E5            | HL-E5             |
| Canon  | DIGITALCAMERA | Rebel XT            | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | Rebel XT GRIP       | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | Rebel Xti (400D)    | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | Rebel Xti SLR       | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | S1 IS               | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | S100                | NB-1LH           | HL-1LHP           |
| Canon  | DIGITALCAMERA | S110                | NB-1LH           | HL-1LHP           |
| Canon  | DIGITALCAMERA | S2 IS               | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | S200                | NB-1LH           | HL-1LHP           |
| Canon  | DIGITALCAMERA | S230                | NB-1LH           | HL-1LHP           |
| Canon  | DIGITALCAMERA | S3 IS               | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | S30                 | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | S300                | NB-1LH           | HL-1LHP           |
| Canon  | DIGITALCAMERA | S330                | NB-1LH           | HL-1LHP           |
| Canon  | DIGITALCAMERA | S40                 | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | S400                | NB-1LH           | HL-1LHP           |
| Canon  | DIGITALCAMERA | S410                | NB-1LH           | HL-1LHP           |

| Vendor | Camera Type   | Camera Model   | Original Battery | Hahnel Battery    |
|--------|---------------|----------------|------------------|-------------------|
| Canon  | DIGITALCAMERA | S45            | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | S5 IS          | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | S50            | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | S500           | NB-1LH           | HL-1LHP           |
| Canon  | DIGITALCAMERA | S60            | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | S70            | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | S80            | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | SD 940 IS      | NB-4L            | HL-4L             |
| Canon  | DIGITALCAMERA | SD 940 IS      | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD10           | NB-3L            | HL-3L             |
| Canon  | DIGITALCAMERA | SD100          | NB-3L            | HL-3L             |
| Canon  | DIGITALCAMERA | SD1000         | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD110          | NB-3L            | HL-3L             |
| Canon  | DIGITALCAMERA | SD1100 IS      | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD1300 IS      | NB-6L            | HL-6L             |
| Canon  | DIGITALCAMERA | SD1400 IS      | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD20           | NB-3L            | HL-3L             |
| Canon  | DIGITALCAMERA | SD200          | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD30           | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD300          | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD3500 IS      | NB-6L            | HL-6L             |
| Canon  | DIGITALCAMERA | SD40           | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD400          | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD430 Wireless | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD450          | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD500          | NB-3L            | HL-3L             |
| Canon  | DIGITALCAMERA | SD550          | NB-3L            | HL-3L             |
| Canon  | DIGITALCAMERA | SD600          | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD630          | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD700          | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | SD750          | NB-4L            | HL-4LHP           |
| Canon  | DIGITALCAMERA | SD770          | NB-6L            | HL-6L             |
| Canon  | DIGITALCAMERA | SD790          | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | SD800 IS       | NB-2LH           | HL-2LHP           |
| Canon  | DIGITALCAMERA | SD850IS        | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | SD860 IS       | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | SD870 IS       | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | SD890 IS       | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | SD900          | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | SD950 IS       | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | SD960 IS       | NB-5L            | HL-5L             |
| Canon  | DIGITALCAMERA | SD980 IS       | NB-6L            | HL-6L             |
| Canon  | DIGITALCAMERA | SX100 IS       | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | SX110 IS       | AA               | AA Mignon 2700mAh |
| Canon  | DIGITALCAMERA | SX210 IS       | NB-5L            | HL-5LHP           |
| Canon  | DIGITALCAMERA | TX1            | NB-4L            | HL-4LHP           |
| Casio  | DIGITALCAMERA | EX-1050        | NP-40            | HL-CA40           |
| Casio  | DIGITALCAMERA | EX-750         | NP-40            | HL-CA40           |
| Casio  | DIGITALCAMERA | EX-A270        | NP-80            | HL-CA80           |
| Casio  | DIGITALCAMERA | EX-F1          | NP-100           | HL-CA100          |
| Casio  | DIGITALCAMERA | EX-FC100       | NP-40            | HL-CA40           |
| Casio  | DIGITALCAMERA | EX-FC150       | NP-40            | HL-CA40           |
| Casio  | DIGITALCAMERA | EX-FH20        | AA               | AA Mignon 2350mAh |
| Casio  | DIGITALCAMERA | EX-FH20        | AA               | AA Mignon 2700mAh |
| Casio  | DIGITALCAMERA | EX-FH20        | AA               | Go                |
| Casio  | DIGITALCAMERA | EX-FH25        | AA               | Go                |
| Casio  | DIGITALCAMERA | EX-FS10        | NP-CA60          | HL-CA60           |
| Casio  | DIGITALCAMERA | EX-G1          | NP-80            | HL-CA80           |
| Casio  | DIGITALCAMERA | EX-H10         | NP-90            | HL-CA90           |
| Casio  | DIGITALCAMERA | EX-H15         | NP-90            | HL-CA90           |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Casio         | DIGITALCAMERA      | EX-HF100            | NP-90                   | HL-CA90               |
| Casio         | DIGITALCAMERA      | EX-M1               | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-M2               | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-M20U             | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-P505             | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-P600             | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-P700             | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-S1               | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-S10              | NP-CA60                 | HL-CA60               |
| Casio         | DIGITALCAMERA      | EX-S100             | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-S12              | NP-CA60                 | HL-CA60               |
| Casio         | DIGITALCAMERA      | EX-S2               | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-S20U             | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-S3               | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-S5               | NP-80                   | HL-CA80               |
| Casio         | DIGITALCAMERA      | EX-S500             | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-S600             | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-S600D            | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-S7               | NP-80                   | HL-CA80               |
| Casio         | DIGITALCAMERA      | EX-S770             | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-S880             | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-V7               | NP-50                   | HL-CA50               |
| Casio         | DIGITALCAMERA      | EX-V8               | NP-50                   | HL-CA50               |
| Casio         | DIGITALCAMERA      | EX-Z10              | AA                      | AA Mignon 2700mAh     |
| Casio         | DIGITALCAMERA      | EX-Z100             | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z1000            | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z1080            | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z110             | AA                      | AA Mignon 2700mAh     |
| Casio         | DIGITALCAMERA      | EX-Z120             | AA                      | AA Mignon 2700mAh     |
| Casio         | DIGITALCAMERA      | EX-Z1200SR          | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z150             | NP-70                   | HL-F70                |
| Casio         | DIGITALCAMERA      | EX-Z2               | NP-80                   | HL-CA80               |
| Casio         | DIGITALCAMERA      | EX-Z200             | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z250             | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z270             | NP-80                   | HL-CA80               |
| Casio         | DIGITALCAMERA      | EX-Z280             | NP-80                   | HL-CA80               |
| Casio         | DIGITALCAMERA      | EX-Z29              | NP-CA60                 | HL-CA60               |
| Casio         | DIGITALCAMERA      | EX-Z3               | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-Z300             | NP-70                   | HL-F70                |
| Casio         | DIGITALCAMERA      | EX-Z33              | NP-80                   | HL-CA80               |
| Casio         | DIGITALCAMERA      | EX-Z4               | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-Z40              | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z400             | NP-CA70                 | HL-CA70               |
| Casio         | DIGITALCAMERA      | EX-Z450             | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z4U              | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-Z50              | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z500             | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z55              | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z550             | NP-80                   | HL-CA80               |
| Casio         | DIGITALCAMERA      | EX-Z57              | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z60              | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-Z600             | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z70              | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-Z700             | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z75              | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-Z750             | NP-40                   | HL-CA40               |
| Casio         | DIGITALCAMERA      | EX-Z77              | NP-20                   | HL-CA20               |
| Casio         | DIGITALCAMERA      | EX-Z80              | NP-CA60                 | HL-CA60               |
| Casio         | DIGITALCAMERA      | EX-Z85              | NP-CA60                 | HL-CA60               |
| Casio         | DIGITALCAMERA      | EX-Z850             | NP-40                   | HL-CA40               |

| Vendor        | Camera Type   | Camera Model   | Original Battery | Hahnel Battery    |
|---------------|---------------|----------------|------------------|-------------------|
| Casio         | DIGITALCAMERA | EX-Z9          | NP-CA60          | HL-CA60           |
| Casio         | DIGITALCAMERA | EX-Z90         | NP-CA60          | HL-CA60           |
| Casio         | DIGITALCAMERA | GV-20 G-BROS   | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-2300        | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-2400        | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-2800        | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-2900        | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-3000        | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-3500        | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-4000        | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-5700        | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-R3          | NP-30            | HL-CA30           |
| Casio         | DIGITALCAMERA | QV-R4          | NP-30            | HL-CA30           |
| Casio         | DIGITALCAMERA | QV-R40         | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-R51         | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-R62         | AA               | AA Mignon 2700mAh |
| Casio         | DIGITALCAMERA | QV-S20U        | NP-20            | HL-CA20           |
| Centon        | DIGITALCAMERA | DC5            | NP-60            | HL-F60            |
| Concord       | DIGITALCAMERA | 5345z          | AA               | AA Mignon 2700mAh |
| Concord       | DIGITALCAMERA | EYE-Q 2100 AF  | AA               | AA Mignon 2700mAh |
| Concord       | DIGITALCAMERA | EYE-Q 3100 AF  | AA               | AA Mignon 2700mAh |
| Concord       | DIGITALCAMERA | EYE-Q 3120 AF  | AA               | AA Mignon 2700mAh |
| Contax        | DIGITALCAMERA | N1             | AA               | AA Mignon 2700mAh |
| Contax        | DIGITALCAMERA | U4R            | BP-1100          | HL-1100           |
| Creative Labs | CAMCORDER     | DiVi CAM 316   | AA               | AA Mignon 2700mAh |
| D'Zign        | DIGITALCAMERA | DZ 338         | AA               | AA Mignon 2700mAh |
| Epson         | DIGITALCAMERA | PHOTO PC 3000Z | AA               | AA Mignon 2700mAh |
| Epson         | DIGITALCAMERA | PHOTO PC 3100Z | AA               | AA Mignon 2700mAh |
| Epson         | DIGITALCAMERA | PHOTO PC 650   | AA               | AA Mignon 2700mAh |
| Epson         | DIGITALCAMERA | PHOTO PC 850Z  | AA               | AA Mignon 2700mAh |
| Fujifilm      | DIGITALCAMERA | @XIA IX-10     | AA               | AA Mignon 2700mAh |
| Fujifilm      | DIGITALCAMERA | @XIA IX-100    | AA               | AA Mignon 2700mAh |
| Fujifilm      | DIGITALCAMERA | A170           | AA               | AA Mignon 2700mAh |
| Fujifilm      | DIGITALCAMERA | A170           | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | A175           | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | A220           | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | A225           | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | AV100          | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | AV105          | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | AV150          | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | AX200          | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | AX205          | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | AX250          | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | AX280          | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | DS-260         | NP-100           | HL-F100           |
| Fujifilm      | DIGITALCAMERA | DS-7           | AA               | AA Mignon 2700mAh |
| Fujifilm      | DIGITALCAMERA | DX-10          | AA               | AA Mignon 2700mAh |
| Fujifilm      | DIGITALCAMERA | DX-5           | AA               | AA Mignon 2700mAh |
| Fujifilm      | DIGITALCAMERA | DX-7           | AA               | AA Mignon 2700mAh |
| Fujifilm      | DIGITALCAMERA | DX-8           | AA               | AA Mignon 2700mAh |
| Fujifilm      | DIGITALCAMERA | F100fd         | NP-50            | HL-F50            |
| Fujifilm      | DIGITALCAMERA | F80EXR         | NP-50            | HL-F50            |
| Fujifilm      | DIGITALCAMERA | F85EXR         | NP-50            | HL-F50            |
| Fujifilm      | DIGITALCAMERA | Finepix 1300   | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | Finepix 1300   | NP-80            | HL-F80            |
| Fujifilm      | DIGITALCAMERA | Finepix 1400   | AA               | Go                |
| Fujifilm      | DIGITALCAMERA | Finepix 1400   | NP-80            | HL-F80            |
| Fujifilm      | DIGITALCAMERA | Finepix 205s   | AA               | AA Mignon 2700mAh |
| Fujifilm      | DIGITALCAMERA | Finepix 2300   | AA               | AA Mignon 2700mAh |
| Fujifilm      | DIGITALCAMERA | Finepix 2400   | AA               | AA Mignon 2700mAh |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Fujifilm      | DIGITALCAMERA      | Finepix 2600        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix 2650        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix 2800        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix 30i         | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix 3800        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix 401i        | NP-60                   | HL-F60                |
| Fujifilm      | DIGITALCAMERA      | Finepix 402         | NP-40                   | HL-F40                |
| Fujifilm      | DIGITALCAMERA      | Finepix 40i         | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix 4700        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix 4800        | NP-80                   | HL-F80                |
| Fujifilm      | DIGITALCAMERA      | Finepix 4900        | NP-80                   | HL-F80                |
| Fujifilm      | DIGITALCAMERA      | Finepix 50i         | NP-60                   | HL-F60                |
| Fujifilm      | DIGITALCAMERA      | Finepix 6800        | NP-80                   | HL-F80                |
| Fujifilm      | DIGITALCAMERA      | Finepix 6900        | NP-80                   | HL-F80                |
| Fujifilm      | DIGITALCAMERA      | FinePix A100        | AA                      | AA Mignon 2350mAh     |
| Fujifilm      | DIGITALCAMERA      | FinePix A100        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | FinePix A100        | AA                      | Go                    |
| Fujifilm      | DIGITALCAMERA      | Finepix A101        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A120        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | FinePix A150        | AA                      | AA Mignon 2350mAh     |
| Fujifilm      | DIGITALCAMERA      | FinePix A150        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | FinePix A150        | AA                      | Go                    |
| Fujifilm      | DIGITALCAMERA      | Finepix A201        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A202        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A203        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A204        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A205        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A210        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A303        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A310        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A330        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A340        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A345        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A350        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A400        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A500        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A600        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A610        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A800        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A820        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix A900        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | FinePix A920        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix E500        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix E510        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix E550        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix E900        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix F10         | NP-120                  | HL-F120               |
| Fujifilm      | DIGITALCAMERA      | Finepix F11         | NP-120                  | HL-F120               |
| Fujifilm      | DIGITALCAMERA      | Finepix F20         | NP-70                   | HL-F70                |
| Fujifilm      | DIGITALCAMERA      | FINEPIX F2000HD     | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | FinePix F200EXR     | NP-50                   | HL-F50                |
| Fujifilm      | DIGITALCAMERA      | Finepix F30         | NP-95                   | HL-F95                |
| Fujifilm      | DIGITALCAMERA      | Finepix F31         | NP-95                   | HL-F95                |
| Fujifilm      | DIGITALCAMERA      | FinePix F40 fd      | NP-70                   | HL-F70                |
| Fujifilm      | DIGITALCAMERA      | Finepix F410        | NP-60                   | HL-F60                |
| Fujifilm      | DIGITALCAMERA      | Finepix F420        | AA                      | AA Mignon 2700mAh     |
| Fujifilm      | DIGITALCAMERA      | Finepix F455        | NP-40                   | HL-F40                |
| Fujifilm      | DIGITALCAMERA      | Finepix F470        | NP-40                   | HL-F40                |
| Fujifilm      | DIGITALCAMERA      | FinePix F480        | NP-40                   | HL-F40                |
| Fujifilm      | DIGITALCAMERA      | FinePix F50FD       | NP-50                   | HL-F50                |

| Vendor   | Camera Type   | Camera Model        | Original Battery | Hahnel Battery    |
|----------|---------------|---------------------|------------------|-------------------|
| Fujifilm | DIGITALCAMERA | Finepix F601        | NP-60            | HL-F60            |
| Fujifilm | DIGITALCAMERA | FINEPIX F60fd       | NP-50            | HL-F50            |
| Fujifilm | DIGITALCAMERA | Finepix F610        | NP-40            | HL-F40            |
| Fujifilm | DIGITALCAMERA | Finepix F650        | NP-40            | HL-F40            |
| Fujifilm | DIGITALCAMERA | Finepix F700        | NP-40            | HL-F40            |
| Fujifilm | DIGITALCAMERA | FinePix F70EXR      | NP-50            | HL-F50            |
| Fujifilm | DIGITALCAMERA | Finepix F710        | NP-40            | HL-F40            |
| Fujifilm | DIGITALCAMERA | Finepix F810        | NP-40            | HL-F40            |
| Fujifilm | DIGITALCAMERA | Finepix F811        | NP-40            | HL-F40            |
| Fujifilm | DIGITALCAMERA | FinePix IS Pro      | NP-150           | HL-F150           |
| Fujifilm | DIGITALCAMERA | FinePix IS-1        | AA               | Go                |
| Fujifilm | DIGITALCAMERA | FINEPIX J100        | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | FINEPIX J110W       | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | FINEPIX J120        | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | FINEPIX J150W       | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | FinePix J20         | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | FinePix J250        | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | Finepix J30         | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | Finepix M603        | NP-60            | HL-F60            |
| Fujifilm | DIGITALCAMERA | FinePix Real 3D W1  | NP-95            | HL-F95            |
| Fujifilm | DIGITALCAMERA | Finepix S1 PRO      | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S1500       | AA               | AA Mignon 2350mAh |
| Fujifilm | DIGITALCAMERA | Finepix S1500       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S1500       | AA               | Go                |
| Fujifilm | DIGITALCAMERA | Finepix S2 PRO      | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S20 PRO     | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | FinePix S200EXR     | NP-140           | HL-F140HP         |
| Fujifilm | DIGITALCAMERA | Finepix S3 PRO      | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S3 Pro UVIR | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S3000       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S304        | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S3100       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S3500       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | FinePix S5 Pro      | NP-150           | HL-F150           |
| Fujifilm | DIGITALCAMERA | Finepix S5000       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S5100       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S5200       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S5500       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S5600       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S5700       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S602        | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S6500fd     | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S700        | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S7000       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | FinePix S8000fd     | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | FinePix S8100fd     | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S9000 Z     | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S9100       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S9500       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix S9600       | AA               | AA Mignon 2700mAh |
| Fujifilm | DIGITALCAMERA | Finepix V10         | NP-40            | HL-F40            |
| Fujifilm | DIGITALCAMERA | Finepix Z1          | NP-40            | HL-F40            |
| Fujifilm | DIGITALCAMERA | FinePix Z100FD      | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | FinePix Z10FD       | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | Finepix Z2          | NP-40            | HL-F40            |
| Fujifilm | DIGITALCAMERA | FinePix Z3 Zoom     | NP-40            | HL-F40            |
| Fujifilm | DIGITALCAMERA | Finepix Z30         | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | Finepix Z300        | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | FinePix Z33         | NP-45            | HL-F45            |
| Fujifilm | DIGITALCAMERA | FinePix Z35         | NP-45            | HL-F45            |

| <b>Vendor</b>             | <b>Camera Type</b> | <b>Camera Model</b>      | <b>Original Battery</b> | <b>Hahnel Battery</b>    |
|---------------------------|--------------------|--------------------------|-------------------------|--------------------------|
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>FinePix Z5fd Zoom</b> | NP-40                   | <b>HL-F40</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>HD-1</b>              | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>HS10</b>              | AA                      | <b>Go</b>                |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>HS11</b>              | AA                      | <b>Go</b>                |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>J10</b>               | NP-40                   | <b>HL-F40</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>J50</b>               | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>JV100</b>             | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>JV105</b>             | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>JV150</b>             | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>JX200</b>             | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>JX205</b>             | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>JZ205</b>             | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>JZ305</b>             | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>JZ500</b>             | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>JZ505</b>             | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>MX-1200</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>MX-1400</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>MX-1500</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>MX-1700</b>           | NP-80                   | <b>HL-F80</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>MX-2700</b>           | NP-80                   | <b>HL-F80</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>MX-2900</b>           | NP-80                   | <b>HL-F80</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>MX-500</b>            | NP-100                  | <b>HL-F100</b>           |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>MX-600</b>            | NP-100                  | <b>HL-F100</b>           |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>MX-600Z</b>           | NP-80                   | <b>HL-F80</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>MX-700</b>            | NP-100                  | <b>HL-F100</b>           |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>MX-700Z</b>           | NP-80                   | <b>HL-F80</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>NEXIA Q1</b>          | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>S1000fd</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>S100FS SLR</b>        | NP-140                  | <b>HL-F140</b>           |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>S1600</b>             | AA                      | <b>Go</b>                |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>S1770</b>             | AA                      | <b>Go</b>                |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>S1800</b>             | AA                      | <b>Go</b>                |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>S1880</b>             | AA                      | <b>Go</b>                |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>S2000HD</b>           | AA                      | <b>Go</b>                |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>S205EXR</b>           | NP-140                  | <b>HL-F140</b>           |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>S205EXR</b>           | NP-140                  | <b>HL-F140HP</b>         |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>S2500HD</b>           | AA                      | <b>Go</b>                |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>S2600HD</b>           | AA                      | <b>Go</b>                |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>XP10</b>              | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>XP11</b>              | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>Z10</b>               | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>Z100</b>              | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>Z20fd</b>             | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>Z31</b>               | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>Z37</b>               | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>Z70</b>               | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>Z700EXR</b>           | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>Z707EXR</b>           | NP-45                   | <b>HL-F45</b>            |
| <b>Fujifilm</b>           | DIGITALCAMERA      | <b>Z71</b>               | NP-45                   | <b>HL-F45</b>            |
| <b>Gateway</b>            | DIGITALCAMERA      | <b>DC-T20</b>            | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Gateway</b>            | DIGITALCAMERA      | <b>DC-T50</b>            | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>GE General Imaging</b> | DIGITALCAMERA      | <b>A730</b>              | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>GE General Imaging</b> | DIGITALCAMERA      | <b>A735</b>              | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>GE General Imaging</b> | DIGITALCAMERA      | <b>A830</b>              | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>GE General Imaging</b> | DIGITALCAMERA      | <b>A835</b>              | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>GE General Imaging</b> | DIGITALCAMERA      | <b>GB40</b>              | KLIC-7003 and GE GB40   | <b>HL-7003</b>           |
| <b>GE General Imaging</b> | DIGITALCAMERA      | <b>GE 1235</b>           | KLIC-7003 and GE GB40   | <b>HL-7003</b>           |
| <b>GE General Imaging</b> | DIGITALCAMERA      | <b>J1050</b>             | Li-40B / Li-42B         | <b>HL-42B / 40B</b>      |
| <b>GE General Imaging</b> | DIGITALCAMERA      | <b>X3</b>                | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Goodmans</b>           | DIGITALCAMERA      | <b>3116</b>              | AA                      | <b>AA Mignon 2700mAh</b> |

| Vendor          | Camera Type   | Camera Model | Original Battery | Hahnel Battery    |
|-----------------|---------------|--------------|------------------|-------------------|
| Grundig         | CAMCORDER     | DLC 1        | D110)            | HL-D08/D120       |
| Grundig         | CAMCORDER     | DLC 10       | D110)            | HL-D08/D120       |
| Grundig         | CAMCORDER     | DLC 20       | D110)            | HL-D08/D120       |
| Grundig         | CAMCORDER     | VM-E330E     | VW-VBD1/CGA-B202 | HL-VBD1           |
| Grundig         | CAMCORDER     | VM-E535LE    | VW-VBD1/CGA-B202 | HL-VBD1           |
| Grundig         | CAMCORDER     | VM-E635LE    | VW-VBD1/CGA-B202 | HL-VBD1           |
| Grundig         | CAMCORDER     | VM-E835      | VW-VBD1/CGA-B202 | HL-VBD1           |
| Grundig         | CAMCORDER     | VM-H630E     | VW-VBD1/CGA-B202 | HL-VBD1           |
| Grundig         | CAMCORDER     | VM-H80/E     | VW-VBD1/CGA-B202 | HL-VBD1           |
| Grundig         | CAMCORDER     | VM-H835      | VW-VBD1/CGA-B202 | HL-VBD1           |
| Grundig         | CAMCORDER     | VM-H835LE    | VW-VBD1/CGA-B202 | HL-VBD1           |
| Grundig         | CAMCORDER     | VM-H90       | VW-VBD1/CGA-B202 | HL-VBD1           |
| Hewlett Packard | DIGITALCAMERA | 120          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 215          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 315          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 318          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 320          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 433          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 435          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 612          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 618          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 620          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 635          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 715          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 720          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 735          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 812          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 850          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 912          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 935          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | 945          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | C20          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | C200         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | C315         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | C500         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | C618         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | C912         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | E317         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | E327         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | E337         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M22          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M23          | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M307         | R07/CP1          | HL-R07            |
| Hewlett Packard | DIGITALCAMERA | M407         | R07/CP1          | HL-R07            |
| Hewlett Packard | DIGITALCAMERA | M417         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M425         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M437         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M447         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M517         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M525         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M527         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M537         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M547         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M637         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | M737         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | Mz67         | AA               | AA Mignon 2700mAh |
| Hewlett Packard | DIGITALCAMERA | R507         | R07/CP1          | HL-R07            |
| Hewlett Packard | DIGITALCAMERA | R607         | R07/CP1          | HL-R07            |
| Hewlett Packard | DIGITALCAMERA | Williams.F1  | R07/CP1          | HL-R07            |
| Hewlett Packard | DIGITALCAMERA | R707         | R07/CP1          | HL-R07            |

| <b>Vendor</b>          | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b>    |
|------------------------|--------------------|---------------------|-------------------------|--------------------------|
| <b>Hewlett Packard</b> | DIGITALCAMERA      | <b>R717</b>         | R07/CP1                 | <b>HL-R07</b>            |
| <b>Hewlett Packard</b> | DIGITALCAMERA      | <b>R725</b>         | R07/CP1                 | <b>HL-R07</b>            |
| <b>Hewlett Packard</b> | DIGITALCAMERA      | <b>R727</b>         | R07/CP1                 | <b>HL-R07</b>            |
| <b>Hewlett Packard</b> | DIGITALCAMERA      | <b>R817</b>         | R07/CP1                 | <b>HL-R07</b>            |
| <b>Hewlett Packard</b> | DIGITALCAMERA      | <b>R818</b>         | R07/CP1                 | <b>HL-R07</b>            |
| <b>Hewlett Packard</b> | DIGITALCAMERA      | <b>R827</b>         | R07/CP1                 | <b>HL-R07</b>            |
| <b>Hewlett Packard</b> | DIGITALCAMERA      | <b>R837</b>         | R07/CP1                 | <b>HL-R07</b>            |
| <b>Hewlett Packard</b> | DIGITALCAMERA      | <b>R847</b>         | R07/CP1                 | <b>HL-R07</b>            |
| <b>Hewlett Packard</b> | DIGITALCAMERA      | <b>R927</b>         | R07/CP1                 | <b>HL-R07</b>            |
| <b>Hewlett Packard</b> | DIGITALCAMERA      | <b>R937</b>         | R07/CP1                 | <b>HL-R07</b>            |
| <b>Hewlett Packard</b> | DIGITALCAMERA      | <b>R967</b>         | R07/CP1                 | <b>HL-R07</b>            |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-BX35</b>      | VWVBG1                  | <b>HL-U07</b>            |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-BX35A</b>     | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-GX3100A</b>   | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-GX3200A</b>   | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-GX3300A</b>   | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV100</b>     | DZ-BP16                 | <b>HL-BP16</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV200</b>     | DZ-BP16                 | <b>HL-BP16</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV208</b>     | DZ-BP16                 | <b>HL-BP16</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV230</b>     | DZ-BP16                 | <b>HL-BP16</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV270 DVD</b> | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV350 DVD</b> | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV380 DVD</b> | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV550A</b>    | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV580A</b>    | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV730A</b>    | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV750A</b>    | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>DZ-MV780A</b>    | DZ-BP14S                | <b>HL-BP14</b>           |
| <b>Hitachi</b>         | CAMCORDER          | <b>VMD-865L</b>     | VM-BPL13                | <b>HL-BPL13</b>          |
| <b>Hitachi</b>         | CAMCORDER          | <b>VMD-875L</b>     | VM-BPL13                | <b>HL-BPL13</b>          |
| <b>Hitachi</b>         | CAMCORDER          | <b>VMD-975L</b>     | VM-BPL13                | <b>HL-BPL13</b>          |
| <b>Hitachi</b>         | CAMCORDER          | <b>VM-E540E</b>     | VM-BPL13                | <b>HL-BPL13</b>          |
| <b>Hitachi</b>         | CAMCORDER          | <b>VM-H650E</b>     | VM-BPL13                | <b>HL-BPL13</b>          |
| <b>Hitachi</b>         | DIGITALCAMERA      | <b>DS5370</b>       | Li-40B / Li-42B         | <b>HL-42B / 40B</b>      |
| <b>Jendigital</b>      | DIGITALCAMERA      | <b>JD 4100 z3</b>   | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Jenoptik</b>        | DIGITALCAMERA      | <b>JD 1300 z3</b>   | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Jenoptik</b>        | DIGITALCAMERA      | <b>JD 1500 z3</b>   | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Jenoptik</b>        | DIGITALCAMERA      | <b>JD 2300 z3</b>   | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Jenoptik</b>        | DIGITALCAMERA      | <b>JD 3300 z3</b>   | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Jenoptik</b>        | DIGITALCAMERA      | <b>JD 800i</b>      | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>JVC</b>             | CAMCORDER          | <b>D20</b>          | BN-V408                 | <b>HL-408</b>            |
| <b>JVC</b>             | CAMCORDER          | <b>D200</b>         | BN-V408                 | <b>HL-408</b>            |
| <b>JVC</b>             | CAMCORDER          | <b>D220</b>         | BN-V408                 | <b>HL-408</b>            |
| <b>JVC</b>             | CAMCORDER          | <b>D23</b>          | BN-V408                 | <b>HL-408</b>            |
| <b>JVC</b>             | CAMCORDER          | <b>D230</b>         | BN-V408                 | <b>HL-408</b>            |
| <b>JVC</b>             | CAMCORDER          | <b>D231</b>         | BN-V408                 | <b>HL-408</b>            |
| <b>JVC</b>             | CAMCORDER          | <b>D240</b>         | BN-VF707                | <b>HL-707M</b>           |
| <b>JVC</b>             | CAMCORDER          | <b>D245</b>         | BN-VF707                | <b>HL-707M</b>           |
| <b>JVC</b>             | CAMCORDER          | <b>D250</b>         | BN-VF707                | <b>HL-707M</b>           |
| <b>JVC</b>             | CAMCORDER          | <b>D260</b>         | BN-VF707                | <b>HL-707M</b>           |
| <b>JVC</b>             | CAMCORDER          | <b>D27</b>          | BN-V408                 | <b>HL-408</b>            |
| <b>JVC</b>             | CAMCORDER          | <b>D270</b>         | BN-VF707                | <b>HL-707M</b>           |
| <b>JVC</b>             | CAMCORDER          | <b>D290</b>         | BN-VF707                | <b>HL-707M</b>           |
| <b>JVC</b>             | CAMCORDER          | <b>D295</b>         | BN-VF707                | <b>HL-707M</b>           |
| <b>JVC</b>             | CAMCORDER          | <b>D30</b>          | BN-V408                 | <b>HL-408</b>            |
| <b>JVC</b>             | CAMCORDER          | <b>D33</b>          | BN-V408                 | <b>HL-408</b>            |
| <b>JVC</b>             | CAMCORDER          | <b>D340</b>         | BN-VF707                | <b>HL-707M</b>           |
| <b>JVC</b>             | CAMCORDER          | <b>D350</b>         | BN-VF707                | <b>HL-707M</b>           |
| <b>JVC</b>             | CAMCORDER          | <b>D370</b>         | BN-VF707                | <b>HL-707M</b>           |
| <b>JVC</b>             | CAMCORDER          | <b>D395</b>         | BN-VF707                | <b>HL-707M</b>           |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| JVC           | CAMCORDER          | D396                | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | D425                | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | D43                 | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | D470                | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | D50                 | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | D53                 | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | D60                 | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | D650                | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | D70                 | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | D72                 | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | D720                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D720                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D720                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D720                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D725                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D725                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D726                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D726                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D728                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D728                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D73                 | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | D740                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D740                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D745                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D745                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D746                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D746                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D750                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D750                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D760                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D760                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D770                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D770                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D771                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D771                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D775                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D775                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D790                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D790                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D796                | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | D796                | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | D93                 | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DF420               | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | DF430               | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | DF450               | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | DF535               | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | DF540               | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | DF550               | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | DF565               | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | DF570               | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | DV1800              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DV2000              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DV2000U             | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DV300               | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DV3000              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DV4000              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DV700               | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL100              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL105              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL107              | BN-V408                 | HL-408                |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| JVC           | CAMCORDER          | DVL108              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL109              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL120              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL140              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL150              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL155              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL157              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL160              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL167              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL1800             | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL1800EK           | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL200              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL205              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL210              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL257              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL300              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL305              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL307              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL308              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL309              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL310              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL310U             | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL313              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL315              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL320              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL355              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL357              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL365              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL367              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL400              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL450              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL500              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL505              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL505U             | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL507              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL510              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL510U             | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL520              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL555              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL557              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL600              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL610              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL707              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL710              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL720              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL725              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL767              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL800              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL805              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL810              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL815              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL817              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL820              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL867              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL910              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL915              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL915U             | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVL920              | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | DVM50               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVM50U              | BN-V507                 | HL-507                |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| JVC           | CAMCORDER          | DVM55               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVM70               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVM75               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVM75U              | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVM80               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVM90               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX10               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX4                | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX40               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX40A              | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX44               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX7                | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX70               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX77               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX8                | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX80               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX88               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX9                | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DVX90               | BN-V507                 | HL-507                |
| JVC           | CAMCORDER          | DZ7                 | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | GR-D325             | BN-VF707                | HL-707M               |
| JVC           | CAMCORDER          | GR-D325             | BN-VF714                | HL-714M               |
| JVC           | CAMCORDER          | GR-D325             | BN-V733                 | HL-733M               |
| JVC           | CAMCORDER          | GRD-X95             | BN-V114                 | HL-114                |
| JVC           | CAMCORDER          | GY-HD100            | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | GY-HD110E           | BN-V408                 | HL-408                |
| JVC           | CAMCORDER          | GY-HM100            | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GY-HM100            | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-HD10             | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-HD10             | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-HD30             | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-HD30             | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-HD300            | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-HD300            | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-HD320            | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-HD320            | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-HD3E             | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-HD3E             | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-HD40             | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-HD40             | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-HD6              | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-HD6              | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-HM1              | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-HM1              | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-HM200            | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-HM200            | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-MG335W           | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-MG335W           | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-MG365            | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-MG365            | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-MG465B           | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-MG465B           | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-MG630            | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-MG630            | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-MG645BEK         | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-MG645BEK         | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-MG670            | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-MG670            | BN-VF823U               | HL-823U               |
| JVC           | CAMCORDER          | GZ-MG680            | BN-VF815U               | HL-815U               |
| JVC           | CAMCORDER          | GZ-MG680            | BN-VF823U               | HL-823U               |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b>    |
|---------------|--------------------|---------------------|-------------------------|--------------------------|
| JVC           | CAMCORDER          | <b>GZ-MG730</b>     | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>GZ-MG730</b>     | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>GZ-MS100</b>     | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>GZ-MS100</b>     | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>GZ-MS120</b>     | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>GZ-MS120</b>     | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>GZ-MS130</b>     | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>GZ-MS130</b>     | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>HD7</b>          | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>HD7</b>          | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>M50</b>          | BN-V507                 | <b>HL-507</b>            |
| JVC           | CAMCORDER          | <b>M70</b>          | BN-V507                 | <b>HL-507</b>            |
| JVC           | CAMCORDER          | <b>MC100</b>        | BN-VM200U               | <b>HL-VM200</b>          |
| JVC           | CAMCORDER          | <b>MC200</b>        | BN-VM200U               | <b>HL-VM200</b>          |
| JVC           | CAMCORDER          | <b>MC500</b>        | BN-VM200U               | <b>HL-VM200</b>          |
| JVC           | CAMCORDER          | <b>MG130</b>        | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>MG130</b>        | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>MG135</b>        | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>MG135</b>        | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>MG150</b>        | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>MG150</b>        | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>MG155</b>        | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>MG155</b>        | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>MG175</b>        | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>MG175</b>        | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>MG20</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG21</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG255</b>        | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>MG255</b>        | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>MG27</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG275</b>        | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>MG275</b>        | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>MG30</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG36</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG37</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG40</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG50</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG505</b>        | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG555</b>        | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>MG555</b>        | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>MG57</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG575</b>        | BN-VF815U               | <b>HL-815U</b>           |
| JVC           | CAMCORDER          | <b>MG575</b>        | BN-VF823U               | <b>HL-823U</b>           |
| JVC           | CAMCORDER          | <b>MG60</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG67</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG70</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>MG77</b>         | BN-VF707                | <b>HL-707M</b>           |
| JVC           | CAMCORDER          | <b>X5</b>           | BN-VF707                | <b>HL-707M</b>           |
| JVC           | DIGITALCAMERA      | <b>GC- S5</b>       | NP-100                  | <b>HL-F100</b>           |
| Kodak         | CAMCORDER          | <b>Ki8</b>          | KILIC-7004              | <b>HL-7004</b>           |
| Kodak         | DIGITALCAMERA      | <b>C182</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| Kodak         | DIGITALCAMERA      | <b>C182</b>         | AA                      | <b>Go</b>                |
| Kodak         | DIGITALCAMERA      | <b>C190</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| Kodak         | DIGITALCAMERA      | <b>C190</b>         | AA                      | <b>Go</b>                |
| Kodak         | DIGITALCAMERA      | <b>C300</b>         | AA                      | <b>Go</b>                |
| Kodak         | DIGITALCAMERA      | <b>C310</b>         | AA                      | <b>Go</b>                |
| Kodak         | DIGITALCAMERA      | <b>C330</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| Kodak         | DIGITALCAMERA      | <b>C340</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| Kodak         | DIGITALCAMERA      | <b>C360</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| Kodak         | DIGITALCAMERA      | <b>C433</b>         | AA                      | <b>AA Mignon 2700mAh</b> |

| Vendor | Camera Type   | Camera Model | Original Battery | Hahnel Battery    |
|--------|---------------|--------------|------------------|-------------------|
| Kodak  | DIGITALCAMERA | C513         | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | C530         | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | C533         | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | C613         | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | C643         | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | C663         | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | C743         | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | C875         | Klic 7001        | HL-7001           |
| Kodak  | DIGITALCAMERA | CD50         | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX4200       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX4210       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX4230       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX4300       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX4310       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX6200       | AA               | Go                |
| Kodak  | DIGITALCAMERA | CX6230       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX6330       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX6490       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX7220       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX7300       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX7310       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX7330       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX7430       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX7440       | Klic 5001        | HL-5001           |
| Kodak  | DIGITALCAMERA | CX7525       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX7530       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | CX7590       | Klic 5001        | HL-5001           |
| Kodak  | DIGITALCAMERA | DC120        | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC200        | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC210        | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC210 PLUS   | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC215        | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC220        | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC240        | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC260        | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC280        | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC290        | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC3200       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC3400       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC3500       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC3600       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC3700       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC3800       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC3900       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC4800       | NP-80            | HL-F80            |
| Kodak  | DIGITALCAMERA | DC4800 EZ    | NP-80            | HL-F80            |
| Kodak  | DIGITALCAMERA | DC4900       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DC5000       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX3215       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX3500       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX3600       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX3700       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX3900       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX4200       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX4230       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX4330       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX4530       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX4900       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX6230       | AA               | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | DX6300       | AA               | AA Mignon 2700mAh |

| Vendor | Camera Type   | Camera Model         | Original Battery      | Hahnel Battery    |
|--------|---------------|----------------------|-----------------------|-------------------|
| Kodak  | DIGITALCAMERA | <b>DX6340</b>        | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>DX6440</b>        | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>DX6490</b>        | Klic 5001             | HL-5001           |
| Kodak  | DIGITALCAMERA | <b>DX7440</b>        | Klic 5001             | HL-5001           |
| Kodak  | DIGITALCAMERA | <b>DX7590</b>        | Klic 5001             | HL-5001           |
| Kodak  | DIGITALCAMERA | <b>DX7630</b>        | Klic 5001             | HL-5001           |
| Kodak  | DIGITALCAMERA | <b>EasyShare one</b> | Klic 5000             | HL-5000           |
| Kodak  | DIGITALCAMERA | <b>LS-420</b>        | Klic 5000             | HL-5000           |
| Kodak  | DIGITALCAMERA | <b>LS-443</b>        | Klic 5000             | HL-5000           |
| Kodak  | DIGITALCAMERA | <b>LS-633</b>        | Klic 5000             | HL-5000           |
| Kodak  | DIGITALCAMERA | <b>LS-743</b>        | Klic 5000             | HL-5000           |
| Kodak  | DIGITALCAMERA | <b>LS-753</b>        | Klic 5000             | HL-5000           |
| Kodak  | DIGITALCAMERA | <b>M1033</b>         | KILIC-7004            | HL-7004           |
| Kodak  | DIGITALCAMERA | <b>M320</b>          | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>M340</b>          | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>M341</b>          | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>M380</b>          | KLIC-7003 and GE GB40 | HL-7003           |
| Kodak  | DIGITALCAMERA | <b>M381</b>          | KLIC-7003 and GE GB40 | HL-7003           |
| Kodak  | DIGITALCAMERA | <b>M420</b>          | KLIC-7003 and GE GB40 | HL-7003           |
| Kodak  | DIGITALCAMERA | <b>M530</b>          | KLIC-7006             | HL-7006           |
| Kodak  | DIGITALCAMERA | <b>M550</b>          | KLIC-7006             | HL-7006           |
| Kodak  | DIGITALCAMERA | <b>M575</b>          | KLIC-7006             | HL-7006           |
| Kodak  | DIGITALCAMERA | <b>M580</b>          | KLIC-7006             | HL-7006           |
| Kodak  | DIGITALCAMERA | <b>M753</b>          | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>M763</b>          | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>M853</b>          | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>M863</b>          | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>M873</b>          | KLIC-7006             | HL-7006           |
| Kodak  | DIGITALCAMERA | <b>M883</b>          | KLIC-7006             | HL-7006           |
| Kodak  | DIGITALCAMERA | <b>M893 IS</b>       | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>P850</b>          | Klic 5001             | HL-5001           |
| Kodak  | DIGITALCAMERA | <b>P880</b>          | Klic 5001             | HL-5001           |
| Kodak  | DIGITALCAMERA | <b>V1003</b>         | KLIC-7003 and GE GB40 | HL-7003           |
| Kodak  | DIGITALCAMERA | <b>V1073</b>         | KILIC-7004            | HL-7004           |
| Kodak  | DIGITALCAMERA | <b>V1233</b>         | KILIC-7004            | HL-7004           |
| Kodak  | DIGITALCAMERA | <b>V1253</b>         | KILIC-7004            | HL-7004           |
| Kodak  | DIGITALCAMERA | <b>V1273</b>         | KILIC-7004            | HL-7004           |
| Kodak  | DIGITALCAMERA | <b>V550</b>          | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>V570</b>          | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>V610</b>          | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>V705</b>          | Klic 7001             | HL-7001           |
| Kodak  | DIGITALCAMERA | <b>V803</b>          | KLIC-7003 and GE GB40 | HL-7003           |
| Kodak  | DIGITALCAMERA | <b>Z1085</b>         | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>Z1275</b>         | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>Z1285</b>         | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>Z650</b>          | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>Z700</b>          | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>Z710</b>          | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>Z730</b>          | Klic 5000             | HL-5000           |
| Kodak  | DIGITALCAMERA | <b>Z740</b>          | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>Z7590</b>         | Klic 5000             | HL-5000           |
| Kodak  | DIGITALCAMERA | <b>Z760</b>          | Klic 5000             | HL-5000           |
| Kodak  | DIGITALCAMERA | <b>Z8612</b>         | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>Z915</b>          | AA                    | AA Mignon 2350mAh |
| Kodak  | DIGITALCAMERA | <b>Z915</b>          | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>Z915</b>          | AA                    | Go                |
| Kodak  | DIGITALCAMERA | <b>Z950</b>          | KLIC-7003 and GE GB40 | HL-7003           |
| Kodak  | DIGITALCAMERA | <b>Z980</b>          | AA                    | AA Mignon 2350mAh |
| Kodak  | DIGITALCAMERA | <b>Z980</b>          | AA                    | AA Mignon 2700mAh |
| Kodak  | DIGITALCAMERA | <b>Z980</b>          | AA                    | Go                |

| Vendor         | Camera Type   | Camera Model  | Original Battery | Hahnel Battery    |
|----------------|---------------|---------------|------------------|-------------------|
| Kodak          | DIGITALCAMERA | Z981          | AA               | Go                |
| Konica Minolta | DIGITALCAMERA | C2            | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage 2330   | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage 5      | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage 7      | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage 7 (hi) | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage 7 (l)  | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage A1     | NP-400           | HL-KM400          |
| Konica Minolta | DIGITALCAMERA | Dimage A2     | NP-400           | HL-KM400          |
| Konica Minolta | DIGITALCAMERA | Dimage A200   | NP-800           | HL-KM800          |
| Konica Minolta | DIGITALCAMERA | Dimage E201   | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage E203   | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage E223   | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage E323   | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage E40    | NP-900           | HL-KM900          |
| Konica Minolta | DIGITALCAMERA | Dimage E50    | NP-900           | HL-KM900          |
| Konica Minolta | DIGITALCAMERA | Dimage F100   | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage F200   | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage F300   | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage G400   | DR-LB4           | HL-B4/P500        |
| Konica Minolta | DIGITALCAMERA | Dimage G500   | DR-LB4           | HL-B4/P500        |
| Konica Minolta | DIGITALCAMERA | Dimage G530   | DR-LB4           | HL-B4/P500        |
| Konica Minolta | DIGITALCAMERA | Dimage G600   | DR-LB4           | HL-B4/P500        |
| Konica Minolta | DIGITALCAMERA | Dimage S304   | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage S404   | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage S414   | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage X      | NP-200           | HL-KM200          |
| Konica Minolta | DIGITALCAMERA | Dimage X1     | NP-1             | HL-KMP1           |
| Konica Minolta | DIGITALCAMERA | Dimage X20    | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage X21    | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage X31    | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage X50    | NP-700           | HL-KM700          |
| Konica Minolta | DIGITALCAMERA | Dimage X60    | NP-700           | HL-KM700          |
| Konica Minolta | DIGITALCAMERA | Dimage Xg     | NP-200           | HL-KM200          |
| Konica Minolta | DIGITALCAMERA | Dimage Xi     | NP-200           | HL-KM200          |
| Konica Minolta | DIGITALCAMERA | Dimage Xt     | NP-200           | HL-KM200          |
| Konica Minolta | DIGITALCAMERA | Dimage Z1     | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage Z10    | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage Z2     | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage Z20    | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage Z3     | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage Z5     | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dimage Z6     | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | Dynax 5D      | NP-400           | HL-KM400          |
| Konica Minolta | DIGITALCAMERA | Dynax 7D      | NP-400           | HL-KM400          |
| Konica Minolta | DIGITALCAMERA | e-mini        | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | e-mini u      | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | KD-100        | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | KD-200Z       | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | KD-20M        | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | KD-220Z       | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | KD-25         | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | KD-3000Z      | AA               | AA Mignon 2700mAh |
| Konica Minolta | DIGITALCAMERA | KD-310Z       | DR-LB4           | HL-B4/P500        |
| Konica Minolta | DIGITALCAMERA | KD-400Z       | DR-LB4           | HL-B4/P500        |
| Konica Minolta | DIGITALCAMERA | KD-410Z       | DR-LB4           | HL-B4/P500        |
| Konica Minolta | DIGITALCAMERA | KD-420Z       | DR-LB4           | HL-B4/P500        |
| Konica Minolta | DIGITALCAMERA | KD-500Z       | DR-LB4           | HL-B4/P500        |
| Konica Minolta | DIGITALCAMERA | KD-510Z       | DR-LB4           | HL-B4/P500        |
| Konica Minolta | DIGITALCAMERA | Maxxum 5D     | NP-400           | HL-KM400          |

| Vendor         | Camera Type   | Camera Model    | Original Battery | Hahnel Battery    |
|----------------|---------------|-----------------|------------------|-------------------|
| Konica Minolta | DIGITALCAMERA | Maxxum 7 D      | NP-400           | HL-KM400          |
| Konica Minolta | DIGITALCAMERA | Maxxum 7 SLR    | NP-400           | HL-KM400          |
| Konica Minolta | DIGITALCAMERA | RD-3000         | AA               | AA Mignon 2700mAh |
| Kyocera        | DIGITALCAMERA | Finecam EZ5030  | AA               | AA Mignon 2700mAh |
| Kyocera        | DIGITALCAMERA | Finecam L3V     | AA               | AA Mignon 2700mAh |
| Kyocera        | DIGITALCAMERA | Finecam L4V     | AA               | AA Mignon 2700mAh |
| Kyocera        | DIGITALCAMERA | Finecam M410R   | AA               | AA Mignon 2700mAh |
| Kyocera        | DIGITALCAMERA | Finecam SL400   | AA               | AA Mignon 2700mAh |
| Kyocera        | DIGITALCAMERA | U4R             | BP-1100          | HL-1100           |
| Leica          | DIGITALCAMERA | DIGLUX          | NP-100           | HL-F100           |
| Leica          | DIGITALCAMERA | DIGLUX 4        | CGA-S005         | HL-005            |
| Leica          | DIGITALCAMERA | DIGLUX 4        | BP-DC4           | HL-DC4            |
| Leica          | DIGITALCAMERA | DIGLUX ZOOM     | NP-80            | HL-F80            |
| Leica          | DIGITALCAMERA | D-LUX           | BP-DC2           | HL-DC2            |
| Leica          | DIGITALCAMERA | D-LUX 2         | BP-DC2           | HL-DC2            |
| Leica          | DIGITALCAMERA | D-LUX 3         | BP-DC4           | HL-DC4            |
| Leica          | DIGITALCAMERA | LC20K           | AA               | AA Mignon 2700mAh |
| Leica          | DIGITALCAMERA | LC20S           | AA               | AA Mignon 2700mAh |
| Leica          | DIGITALCAMERA | V-LUX 1         | BP-DC5           | HL-DC5            |
| Maginon        | DIGITALCAMERA | DC-500          | AA               | AA Mignon 2700mAh |
| Nytech / Avant | DIGITALCAMERA | 02491001500     | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | 02491-0015-00   | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | 02491-0026-00   | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | 02491-0037-00   | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | 02491-0037-01   | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | 02491-0037-04   | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | 02491-0048-00   | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | BATS4           | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | DM-6133         | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | DM6331          | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | LP-200702       | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | MD85700         | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | NP900           | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | NP-900          | NP-900           | HL-KM900          |
| Nytech / Avant | DIGITALCAMERA | VG0376120700006 | NP-900           | HL-KM900          |
| Microtek       | DIGITALCAMERA | TAKE IT S3      | AA               | AA Mignon 2700mAh |
| Minox          | DIGITALCAMERA | DC 2111         | AA               | AA Mignon 2700mAh |
| Nikon          | DIGITALCAMERA | Coolpix 2000    | AA               | AA Mignon 2700mAh |
| Nikon          | DIGITALCAMERA | Coolpix 2100    | AA               | AA Mignon 2700mAh |
| Nikon          | DIGITALCAMERA | Coolpix 2200    | AA               | AA Mignon 2700mAh |
| Nikon          | DIGITALCAMERA | Coolpix 2500    | EN-EL2           | HL-EL2            |
| Nikon          | DIGITALCAMERA | Coolpix 3100    | AA               | AA Mignon 2700mAh |
| Nikon          | DIGITALCAMERA | Coolpix 3200    | AA               | AA Mignon 2700mAh |
| Nikon          | DIGITALCAMERA | Coolpix 3500    | EN-EL2           | HL-EL2            |
| Nikon          | DIGITALCAMERA | Coolpix 3700    | EN-EL5           | HL-EL5            |
| Nikon          | DIGITALCAMERA | Coolpix 4100    | AA               | AA Mignon 2700mAh |
| Nikon          | DIGITALCAMERA | Coolpix 4200    | EN-EL5           | HL-EL5            |
| Nikon          | DIGITALCAMERA | Coolpix 4300    | EN-EL1           | HL-EL1            |
| Nikon          | DIGITALCAMERA | Coolpix 4500    | EN-EL1           | HL-EL1            |
| Nikon          | DIGITALCAMERA | Coolpix 4600    | AA               | AA Mignon 2700mAh |
| Nikon          | DIGITALCAMERA | Coolpix 4800    | EN-EL1           | HL-EL1            |
| Nikon          | DIGITALCAMERA | Coolpix 5000    | EN-EL1           | HL-EL1            |
| Nikon          | DIGITALCAMERA | Coolpix 5200    | EN-EL5           | HL-EL5            |
| Nikon          | DIGITALCAMERA | Coolpix 5400    | EN-EL1           | HL-EL1            |
| Nikon          | DIGITALCAMERA | Coolpix 5600    | AA               | AA Mignon 2700mAh |
| Nikon          | DIGITALCAMERA | Coolpix 5700    | EN-EL1           | HL-EL1            |
| Nikon          | DIGITALCAMERA | Coolpix 5900    | EN-EL5           | HL-EL5            |
| Nikon          | DIGITALCAMERA | Coolpix 7600    | AA               | AA Mignon 2700mAh |
| Nikon          | DIGITALCAMERA | Coolpix 775     | EN-EL1           | HL-EL1            |
| Nikon          | DIGITALCAMERA | Coolpix 7900    | EN-EL5           | HL-EL5            |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Nikon         | DIGITALCAMERA      | Coolpix 800         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | Coolpix 8400        | EN-EL7                  | HL-EL7                |
| Nikon         | DIGITALCAMERA      | Coolpix 8700        | EN-EL1                  | HL-EL1                |
| Nikon         | DIGITALCAMERA      | Coolpix 880         | EN-EL1                  | HL-EL1                |
| Nikon         | DIGITALCAMERA      | Coolpix 8800        | EN-EL7                  | HL-EL7                |
| Nikon         | DIGITALCAMERA      | Coolpix 885         | EN-EL1                  | HL-EL1                |
| Nikon         | DIGITALCAMERA      | Coolpix 950         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | Coolpix 990         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | Coolpix 995         | EN-EL1                  | HL-EL1                |
| Nikon         | DIGITALCAMERA      | Coolpix L1          | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | Coolpix L10         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX L100        | AA                      | AA Mignon 2350mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX L100        | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX L100        | AA                      | Go                    |
| Nikon         | DIGITALCAMERA      | Coolpix L11         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | Coolpix L12         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | Coolpix L14         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | Coolpix L15         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX L16         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX L18         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX L19         | AA                      | AA Mignon 2350mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX L19         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX L19         | AA                      | Go                    |
| Nikon         | DIGITALCAMERA      | Coolpix L2          | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX L20         | AA                      | AA Mignon 2350mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX L20         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX L20         | AA                      | Go                    |
| Nikon         | DIGITALCAMERA      | Coolpix L3          | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | Coolpix L4          | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | Coolpix L5          | AA                      | Go                    |
| Nikon         | DIGITALCAMERA      | Coolpix L6          | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | Coolpix P1          | EN-EL8                  | HL-EL8                |
| Nikon         | DIGITALCAMERA      | Coolpix P2          | EN-EL8                  | HL-EL8                |
| Nikon         | DIGITALCAMERA      | Coolpix P3          | EN-EL5                  | HL-EL5                |
| Nikon         | DIGITALCAMERA      | Coolpix P4          | EN-EL5                  | HL-EL5                |
| Nikon         | DIGITALCAMERA      | Coolpix P50         | EN-EL10                 | HL-EL10               |
| Nikon         | DIGITALCAMERA      | Coolpix P5000       | EN-EL5                  | HL-EL5                |
| Nikon         | DIGITALCAMERA      | Coolpix P5100       | EN-EL5                  | HL-EL5                |
| Nikon         | DIGITALCAMERA      | COOLPIX P60         | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | COOLPIX P6000       | EN-EL5                  | HL-EL5                |
| Nikon         | DIGITALCAMERA      | Coolpix P80 (18x)   | EN-EL5                  | HL-EL5                |
| Nikon         | DIGITALCAMERA      | COOLPIX P90         | EN-EL5                  | HL-EL5                |
| Nikon         | DIGITALCAMERA      | Coolpix S1 Ebony    | EN-EL8                  | HL-EL8                |
| Nikon         | DIGITALCAMERA      | Coolpix S1 Ivory    | EN-EL8                  | HL-EL8                |
| Nikon         | DIGITALCAMERA      | Coolpix S1 Silver   | EN-EL8                  | HL-EL8                |
| Nikon         | DIGITALCAMERA      | Coolpix S10         | EN-EL5                  | HL-EL5                |
| Nikon         | DIGITALCAMERA      | Coolpix S1000pj     | EN-EL12                 | HL-EL12               |
| Nikon         | DIGITALCAMERA      | Coolpix S2          | EN-EL8                  | HL-EL8                |
| Nikon         | DIGITALCAMERA      | Coolpix S200        | EN-EL10                 | HL-EL10               |
| Nikon         | DIGITALCAMERA      | COOLPIX S210        | EN-EL10                 | HL-EL10               |
| Nikon         | DIGITALCAMERA      | COOLPIX S220        | EN-EL10                 | HL-EL10               |
| Nikon         | DIGITALCAMERA      | COOLPIX S230        | EN-EL10                 | HL-EL10               |
| Nikon         | DIGITALCAMERA      | Coolpix S3          | EN-EL8                  | HL-EL8                |
| Nikon         | DIGITALCAMERA      | Coolpix S4          | AA                      | AA Mignon 2700mAh     |
| Nikon         | DIGITALCAMERA      | Coolpix S5          | EN-EL8                  | HL-EL8                |
| Nikon         | DIGITALCAMERA      | Coolpix S50         | EN-EL8                  | HL-EL8                |
| Nikon         | DIGITALCAMERA      | Coolpix S500        | EN-EL10                 | HL-EL10               |
| Nikon         | DIGITALCAMERA      | Coolpix S50c        | EN-EL8                  | HL-EL8                |
| Nikon         | DIGITALCAMERA      | Coolpix S51         | EN-EL8                  | HL-EL8                |
| Nikon         | DIGITALCAMERA      | Coolpix S510        | EN-EL10                 | HL-EL10               |

| Vendor  | Camera Type   | Camera Model       | Original Battery | Hahnel Battery    |
|---------|---------------|--------------------|------------------|-------------------|
| Nikon   | DIGITALCAMERA | Coolpix S51c       | EN-EL8           | HL-EL8            |
| Nikon   | DIGITALCAMERA | Coolpix S52        | EN-EL8           | HL-EL8            |
| Nikon   | DIGITALCAMERA | COOLPIX S520       | EN-EL10          | HL-EL10           |
| Nikon   | DIGITALCAMERA | Coolpix S52c       | EN-EL8           | HL-EL8            |
| Nikon   | DIGITALCAMERA | COOLPIX S550       | EN-EL11          | HL-EL11           |
| Nikon   | DIGITALCAMERA | COOLPIX S560       | EN-EL12          | HL-EL12           |
| Nikon   | DIGITALCAMERA | Coolpix S570       | EN-EL10          | HL-EL10           |
| Nikon   | DIGITALCAMERA | Coolpix S6         | EN-EL8           | HL-EL8            |
| Nikon   | DIGITALCAMERA | COOLPIX S60        | EN-EL12          | HL-EL12           |
| Nikon   | DIGITALCAMERA | COOLPIX S600       | EN-EL10          | HL-EL10           |
| Nikon   | DIGITALCAMERA | COOLPIX S610       | EN-EL12          | HL-EL12           |
| Nikon   | DIGITALCAMERA | COOLPIX S610C      | EN-EL12          | HL-EL12           |
| Nikon   | DIGITALCAMERA | COOLPIX S620       | EN-EL12          | HL-EL12           |
| Nikon   | DIGITALCAMERA | COOLPIX S630       | EN-EL12          | HL-EL12           |
| Nikon   | DIGITALCAMERA | Coolpix S640       | EN-EL12          | HL-EL12           |
| Nikon   | DIGITALCAMERA | Coolpix S70        | EN-EL12          | HL-EL12           |
| Nikon   | DIGITALCAMERA | Coolpix S700       | EN-EL10          | HL-EL10           |
| Nikon   | DIGITALCAMERA | COOLPIX S710       | EN-EL12          | HL-EL12           |
| Nikon   | DIGITALCAMERA | Coolpix S7c        | EN-EL8           | HL-EL8            |
| Nikon   | DIGITALCAMERA | Coolpix S9         | EN-EL8           | HL-EL8            |
| Nikon   | DIGITALCAMERA | Coolpix SQ         | EN-EL2           | HL-EL2            |
| Nikon   | DIGITALCAMERA | D200 SLR           | EN-EL3e          | HL-EL3e           |
| Nikon   | DIGITALCAMERA | D300 SLR           | EN-EL3e          | HL-EL3e           |
| Nikon   | DIGITALCAMERA | D3000 SLR          | EN-EL9           | HL-EL9a           |
| Nikon   | DIGITALCAMERA | D300S SLR          | EN-EL3e          | HL-EL3e           |
| Nikon   | DIGITALCAMERA | D40                | EN-EL9           | HL-EL9a           |
| Nikon   | DIGITALCAMERA | D40x               | EN-EL9           | HL-EL9a           |
| Nikon   | DIGITALCAMERA | D5000 SLR          | EN-EL9           | HL-EL9a           |
| Nikon   | DIGITALCAMERA | D60 SLR            | EN-EL9           | HL-EL9a           |
| Nikon   | DIGITALCAMERA | D70 SLR            | EN-EL3.          | HL-EL3            |
| Nikon   | DIGITALCAMERA | D700 SLR           | EN-EL3e          | HL-EL3e           |
| Nikon   | DIGITALCAMERA | D70s SLR           | EN-EL3.          | HL-EL3            |
| Nikon   | DIGITALCAMERA | D80                | EN-EL3e          | HL-EL3e           |
| Nikon   | DIGITALCAMERA | D90 SLR            | EN-EL3e          | HL-EL3e           |
| Nikon   | DIGITALCAMERA | DI SLR             | AA               | Go                |
| Nikon   | DIGITALCAMERA | DI (H) SLR         | AA               | Go                |
| Nikon   | DIGITALCAMERA | DI (X) SLR         | AA               | Go                |
| Nikon   | DIGITALCAMERA | L110               | AA               | Go                |
| Nikon   | DIGITALCAMERA | L21                | AA               | Go                |
| Nikon   | DIGITALCAMERA | L22                | AA               | Go                |
| Nikon   | DIGITALCAMERA | P100               | EN-EL5           | HL-EL5            |
| Nikon   | DIGITALCAMERA | P5100              | EN-EL5           | HL-EL5            |
| Nikon   | DIGITALCAMERA | P5110              | EN-EL5           | HL-EL5            |
| Nikon   | DIGITALCAMERA | P80                | EN-EL5           | HL-EL5            |
| Nikon   | DIGITALCAMERA | S3000              | EN-EL10          | HL-EL10           |
| Nikon   | DIGITALCAMERA | S4000              | EN-EL10          | HL-EL10           |
| Nikon   | DIGITALCAMERA | S8000              | EN-EL12          | HL-EL12           |
| nv10    | DIGITALCAMERA | CR-5330            | AA               | AA Mignon 2700mAh |
| nv10    | DIGITALCAMERA | CR-5530            | AA               | AA Mignon 2700mAh |
| nv10    | DIGITALCAMERA | CR-6330            | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | μ (mju) Tough 3000 | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | μ(mju)-5010        | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | μ(mju)-6020        | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | μ(mju)-7030        | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | μ(mju)-7040        | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | μ(mju)-8010        | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | μ(mju)-9010        | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | AZ-1               | Li-20B           | HL-20B            |
| Olympus | DIGITALCAMERA | AZ-2               | Li-20B           | HL-20B            |
| Olympus | DIGITALCAMERA | C-1                | AA               | AA Mignon 2700mAh |

| Vendor  | Camera Type   | Camera Model | Original Battery | Hahnel Battery    |
|---------|---------------|--------------|------------------|-------------------|
| Olympus | DIGITALCAMERA | C-100        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-120        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-150        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-160        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-170        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-180        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-2          | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-200        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-2020       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-2040       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-21         | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-2100       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-211        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-220        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-250        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-2500       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-3000       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-3020       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-3030       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-3040       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-310        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-315        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-350        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-360        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-370        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-40         | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-400        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-4040       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-460        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-470        | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | C-480        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-480Z       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-50         | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | C-500        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-5000 Zoom  | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | C-500Z       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-5050       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-5060       | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | C-55         | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-550        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-5500       | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-60         | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | C-70         | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | C-700        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-7000       | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | C-7070       | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | C-720        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-725        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-730        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-740        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-750        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-760        | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | C-765 Ultra  | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | C-770 Ultra  | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | C-800        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-8080       | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | C-820        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-830        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-840        | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-860        | AA               | AA Mignon 2700mAh |

| Vendor  | Camera Type   | Camera Model    | Original Battery | Hahnel Battery    |
|---------|---------------|-----------------|------------------|-------------------|
| Olympus | DIGITALCAMERA | C-960           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | C-990           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-100           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-150           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-230           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-360           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-380           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-390           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-395           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-40            | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-425           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-490           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-510           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-520           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-535           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-540           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-545           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-550           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-560           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-575           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-580           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-595           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | D-630           | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | E-1 (SLR)       | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | E-10            | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | E-100           | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | E-20            | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | E-3 SLR         | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | E-30 SLR        | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | E-300           | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | E-300 Evolt SLR | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | E-330 EVOLT SLR | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | E-400 EVOLT SLR | PS-BLS1          | HL-S1             |
| Olympus | DIGITALCAMERA | E-410 EVOLT SLR | PS-BLS1          | HL-S1             |
| Olympus | DIGITALCAMERA | E-410 SLR       | PS-BLS1          | HL-S1             |
| Olympus | DIGITALCAMERA | E420 SLR        | PS-BLS1          | HL-S1             |
| Olympus | DIGITALCAMERA | E-450 SLR       | PS-BLS1          | HL-S1             |
| Olympus | DIGITALCAMERA | E-500 Evolt SLR | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | E-510 SLR       | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | E-520 SLR       | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | E-550 EVOLT SLR | PS-BLM1          | HL-M1             |
| Olympus | DIGITALCAMERA | E-550 EVOLT SLR | PS-BLS1          | HL-S1             |
| Olympus | DIGITALCAMERA | E-600 SLR       | PS-BLS1          | HL-S1             |
| Olympus | DIGITALCAMERA | E-620           | PS-BLS1          | HL-S1             |
| Olympus | DIGITALCAMERA | FE-100          | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-110          | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-115          | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-120          | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-130          | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-140          | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-150          | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-160          | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-170          | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-180          | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-190          | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-20           | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | FE-200          | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | FE-210          | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-230          | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-240          | Li-40B / Li-42B  | HL-42B / 40B      |

| Vendor  | Camera Type   | Camera Model       | Original Battery | Hahnel Battery    |
|---------|---------------|--------------------|------------------|-------------------|
| Olympus | DIGITALCAMERA | FE-250             | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-26              | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-26              | AA               | Go                |
| Olympus | DIGITALCAMERA | FE-270             | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-280             | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-290             | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-300             | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-3000            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-3010            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-310             | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-340             | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-350             | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-360             | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-4000            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-4030            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-45              | AA               | AA Mignon 2350mAh |
| Olympus | DIGITALCAMERA | FE-45              | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-45              | AA               | Go                |
| Olympus | DIGITALCAMERA | FE-46              | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | FE-46              | AA               | Go                |
| Olympus | DIGITALCAMERA | FE-47              | AA               | Go                |
| Olympus | DIGITALCAMERA | FE-500             | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | FE-5000            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-5010            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-5020            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-5030            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | FE-5500            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Ferrari 2004       | Li-20B           | HL-20B            |
| Olympus | DIGITALCAMERA | IR-300             | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju 1000           | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | mju 1010           | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | mju 1020           | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | mju 1030           | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | mju 1040           | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | mju 1060           | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | MJU 1200           | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju 20             | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Mju 300            | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Mju 400            | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Mju 410            | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Mju 500            | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Mju 550WP          | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju 600            | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Mju 700            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju 720SW          | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju 725 SW         | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju 730            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju 740            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju 750            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju 770            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju 780            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | MJU 790            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju 800            | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Mju 810            | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | MJU 820            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | MJU 830            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | mju 840            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | mju 850            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju Ferrari u      | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Mju Mini Digital S | Li-30B           | HL-30B            |

| Vendor  | Camera Type   | Camera Model      | Original Battery | Hahnel Battery    |
|---------|---------------|-------------------|------------------|-------------------|
| Olympus | DIGITALCAMERA | Mju-7000          | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Mju-9000          | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | Pen E-P1 SLR      | PS-BLS1          | HL-S1             |
| Olympus | DIGITALCAMERA | Pen E-PL1         | PS-BLS1          | HL-S1             |
| Olympus | DIGITALCAMERA | SP-310            | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | SP-320            | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | SP-350            | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | SP-500            | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | SP-510 UZ         | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | SP-550 UZ         | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | SP-560 UZ         | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | SP-565 UZ         | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | SP-570 UZ         | AA               | Go                |
| Olympus | DIGITALCAMERA | SP-590UZ          | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | SP-600UZ          | AA               | Go                |
| Olympus | DIGITALCAMERA | SP-700            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | SP-800UZ          | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | SP-S60 UZ         | AA               | AA Mignon 2700mAh |
| Olympus | DIGITALCAMERA | Stylus 1000       | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Stylus 1010       | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | Stylus 1030SW     | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | Stylus 1040       | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 1050SW     | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | STYLUS 1200       | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 300        | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Stylus 400        | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Stylus 410        | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Stylus 500        | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Stylus 550WP      | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 600        | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | Stylus 7010       | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 710        | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 725 SW     | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 730        | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 740        | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 750        | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 760        | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 770 SW     | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | STYLUS 780        | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | STYLUS 790 SW     | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | STYLUS 820        | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | STYLUS 830        | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 840        | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus 850SW      | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | Stylus Tough 6000 | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | Stylus Tough 6010 | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | Stylus Tough 8000 | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | Stylus Verve S    | Li-30B           | HL-30B            |
| Olympus | DIGITALCAMERA | u TOUGH-6010      | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | u(MJU)-40         | Li-10B/12B       | HL-12B            |
| Olympus | DIGITALCAMERA | U(MJU:)-Mini      | Li-30B           | HL-30B            |
| Olympus | DIGITALCAMERA | u-1010            | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | u-1030SW          | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | u-1040            | Li-50B           | HL-50B            |
| Olympus | DIGITALCAMERA | u-1050SW          | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | u-550WP           | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | u-7000            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | u-7010            | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | U770 SW           | Li-40B / Li-42B  | HL-42B / 40B      |
| Olympus | DIGITALCAMERA | u-840             | Li-40B / Li-42B  | HL-42B / 40B      |

| <b>Vendor</b>           | <b>Camera Type</b> | <b>Camera Model</b>  | <b>Original Battery</b> | <b>Hahnel Battery</b>    |
|-------------------------|--------------------|----------------------|-------------------------|--------------------------|
| <b>Olympus</b>          | DIGITALCAMERA      | <b>u-850SW</b>       | Li-40B / Li-42B         | <b>HL-42B / 40B</b>      |
| <b>Olympus</b>          | DIGITALCAMERA      | <b>u-9000</b>        | Li-50B                  | <b>HL-50B</b>            |
| <b>Olympus</b>          | DIGITALCAMERA      | <b>X-2</b>           | Li-10B/12B              | <b>HL-12B</b>            |
| <b>Olympus</b>          | DIGITALCAMERA      | <b>X-3</b>           | Li-10B/12B              | <b>HL-12B</b>            |
| <b>Olympus/Polaroid</b> | DIGITALCAMERA      | <b>ZOOM</b>          | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Panasonic</b>        | CAMCORDER          | <b>AG-BP15P</b>      | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>AG-BP25</b>       | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>AG-DC15</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>AG-DV1DC</b>      | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>AG-DVC15</b>      | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>AG-DVC60</b>      | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>AG-DVX100 PRO</b> | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>AG-EZ1</b>        | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>AG-EZ80</b>       | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>AG-HVX200</b>     | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>DZ-MV200A</b>     | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>DZ-MV200E</b>     | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>DZ-MV208E</b>     | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>DZ-MV230A</b>     | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>DZ-MV230E</b>     | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>DZ-MV250</b>      | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>DZ-MV270A</b>     | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>DZ-MV270E</b>     | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>GA-EZ20</b>       | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>GR-DVL9000U</b>   | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>GR-DVM1U</b>      | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>GR-DVM801</b>     | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>GR-VBM1</b>       | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DA1</b>        | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DA1B</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DA1EN</b>      | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DE3</b>        | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DJ1</b>        | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DJ100</b>      | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS1</b>        | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS11</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS12B</b>      | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS15</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS150</b>      | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS150B</b>     | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS17</b>       | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS25</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS27</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS28</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS28</b>       | CGA-D16                 | <b>HL-D16/D220</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS28</b>       | CGA-D28                 | <b>HL-D28/D320</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS28</b>       | CGA-D54                 | <b>HL-D54</b>            |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS29</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS3</b>        | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS30</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS33</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS35</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS37</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS38</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS5</b>        | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS50</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS55</b>       | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS5EG</b>      | VW-VBD1/CGA-B202        | <b>HL-VBD1</b>           |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS60B</b>      | D110)                   | <b>HL-D08/D120</b>       |
| <b>Panasonic</b>        | CAMCORDER          | <b>NV-DS65B</b>      | D110)                   | <b>HL-D08/D120</b>       |

| Vendor    | Camera Type | Camera Model | Original Battery | Hahnel Battery |
|-----------|-------------|--------------|------------------|----------------|
| Panasonic | CAMCORDER   | NV-DS77      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-DS77B     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-DS8       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-DS89      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-DS99      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-DS990     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-DX1       | VW-VBD1/CGA-B202 | HL-VBD1        |
| Panasonic | CAMCORDER   | NV-DX100E    | VW-VBD1/CGA-B202 | HL-VBD1        |
| Panasonic | CAMCORDER   | NV-DX110E    | VW-VBD1/CGA-B202 | HL-VBD1        |
| Panasonic | CAMCORDER   | NV-DX1E      | VW-VBD1/CGA-B202 | HL-VBD1        |
| Panasonic | CAMCORDER   | NV-EX1       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-EX1B      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-EX21      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-EX3       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-GS1       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-GS10B     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS11      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-GS12      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-GS120     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS14      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-GS15      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-GS150     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS17      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS180     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS19      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS20      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-GS200     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS21      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS21B     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS22      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS230     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS250     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS27      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS280     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS29      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS3       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-GS300     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS30B     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS320     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS320     | MINI DV          | VWVBG1         |
| Panasonic | CAMCORDER   | NV-GS33      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS330     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS330     | CGA-DU14         | HL-U14         |
| Panasonic | CAMCORDER   | NV-GS330     | CGA-DU21         | HL-U21         |
| Panasonic | CAMCORDER   | NV-GS330     | CGA-DU21         | HL-U21HP       |
| Panasonic | CAMCORDER   | NV-GS35      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS36      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS37      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS39      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS4       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-GS400     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS40B     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS5       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-GS500     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS500     | ??????           | VWVBG1         |
| Panasonic | CAMCORDER   | NV-GS50B     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS55      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS59      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS60      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS65      | VWVBG1           | HL-U07         |

| Vendor    | Camera Type | Camera Model | Original Battery | Hahnel Battery |
|-----------|-------------|--------------|------------------|----------------|
| Panasonic | CAMCORDER   | NV-GS70B     | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS75      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS80      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS83      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS85      | VWVBG1           | HL-U07         |
| Panasonic | CAMCORDER   | NV-GS9       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-GS90      | MINI DV VWVBG1   | HL-U07         |
| Panasonic | CAMCORDER   | NV-GX7       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MG3       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX1       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX1000    | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX2       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX2000    | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX2500    | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX300     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX3000    | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX350     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX5       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX500     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX5000    | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX7       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-MX8       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-RX22      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-RX33      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | NV-RX66      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-BP8       | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DBP5      | VW-VBD1/CGA-B202 | HL-VBD1        |
| Panasonic | CAMCORDER   | PV-DBP8      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC102     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC103     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC152     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC202     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC203     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC252     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC352     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC402     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC52      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC53      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC602     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC702     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC73      | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC852     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC901     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC952     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DC953     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV100     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV1000    | VW-VBD1/CGA-B202 | HL-VBD1        |
| Panasonic | CAMCORDER   | PV-DV100K    | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV101     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV102     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV103     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV200     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV200K    | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV201     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV202     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV203     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV351     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV400     | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV400K    | D110)            | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV401     | D110)            | HL-D08/D120    |

| Vendor    | Camera Type | Camera Model | Original Battery     | Hahnel Battery |
|-----------|-------------|--------------|----------------------|----------------|
| Panasonic | CAMCORDER   | PV-DV402     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV51      | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV52      | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV53      | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV600     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV600K    | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV601     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV602     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV700     | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER   | PV-DV701     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV702     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV710     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV73      | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV800     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV800K    | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV851     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV852     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV900     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV901     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV951     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV952     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DV953     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-DVP8A     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | PV-GS12      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-GS120     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-GS14      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-GS15      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-GS200     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-GS320     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-GS33      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-GS400     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-GS50      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-GS55      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-GS70      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-GS9       | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | PV-V1000     | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER   | PV-VM202     | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER   | S10P1        | CGA-S008 / DMW-BCE10 | HL-008 / E10   |
| Panasonic | CAMCORDER   | S7           | CGA-S008 / DMW-BCE10 | HL-008 / E10   |
| Panasonic | CAMCORDER   | SDR-H18      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | SDR-H20      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | SDR-H20      | CGA-DU14             | HL-U14         |
| Panasonic | CAMCORDER   | SDR-H20      | CGA-DU21             | HL-U21         |
| Panasonic | CAMCORDER   | SDR-H20      | CGA-DU21             | HL-U21HP       |
| Panasonic | CAMCORDER   | SDR-H200     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | SDR-H250     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | SDR-H250     | CGA-DU14             | HL-U14         |
| Panasonic | CAMCORDER   | SDR-H250     | CGA-DU21             | HL-U21         |
| Panasonic | CAMCORDER   | SDR-H250     | CGA-DU21             | HL-U21HP       |
| Panasonic | CAMCORDER   | SDR-H79      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER   | SDR-H79      | CGA-DU14             | HL-U14         |
| Panasonic | CAMCORDER   | SDR-H79      | CGA-DU21             | HL-U21         |
| Panasonic | CAMCORDER   | SDR-H79      | CGA-DU21             | HL-U21HP       |
| Panasonic | CAMCORDER   | SDR-S10      | CGA-S008 / DMW-BCE10 | HL-008 / E10   |
| Panasonic | CAMCORDER   | SDR-S100     | CGA-S303             | HL-303         |
| Panasonic | CAMCORDER   | SDR-S10EB-K  | CGA-S008 / DMW-BCE10 | HL-008 / E10   |
| Panasonic | CAMCORDER   | SDR-S15      | CGA-S008 / DMW-BCE10 | HL-008 / E10   |
| Panasonic | CAMCORDER   | SDR-S150     | CGA-S303             | HL-303         |
| Panasonic | CAMCORDER   | SDR-S26      | CGA-S008 / DMW-BCE10 | HL-008 / E10   |
| Panasonic | CAMCORDER   | SDR-S7       | CGA-S008 / DMW-BCE10 | HL-008 / E10   |

| Vendor    | Camera Type   | Camera Model | Original Battery     | Hahnel Battery |
|-----------|---------------|--------------|----------------------|----------------|
| Panasonic | CAMCORDER     | SDR-S9       | CGA-S008 / DMW-BCE10 | HL-008 / E10   |
| Panasonic | CAMCORDER     | SDR-S9       | CGA-S008 / DMW-BCE10 | HL-008 / E10   |
| Panasonic | CAMCORDER     | SDR-SW20     | CGA-S008 / DMW-BCE10 | HL-008 / E10   |
| Panasonic | CAMCORDER     | SDR-SW21     | CGA-S008 / DMW-BCE10 | HL-008 / E10   |
| Panasonic | CAMCORDER     | SV-AV10 +    | CGA-S302             | HL-302         |
| Panasonic | CAMCORDER     | SV-AV100 +   | CGA-S302             | HL-302         |
| Panasonic | CAMCORDER     | SV-AV10A +   | CGA-S302             | HL-302         |
| Panasonic | CAMCORDER     | SV-AV10D +   | CGA-S302             | HL-302         |
| Panasonic | CAMCORDER     | SV-AV10S +   | CGA-S302             | HL-302         |
| Panasonic | CAMCORDER     | SV-AV20 +    | CGA-S302             | HL-302         |
| Panasonic | CAMCORDER     | SV-AV20A +   | CGA-S302             | HL-302         |
| Panasonic | CAMCORDER     | SV-AV25 +    | CGA-S302             | HL-302         |
| Panasonic | CAMCORDER     | SV-AV30 +    | CGA-S302             | HL-302         |
| Panasonic | CAMCORDER     | VDR-D100     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-D150     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-D160     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-D200     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-D210     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-D220     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-D250     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-D300     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-D310     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-D400     | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-M10      | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER     | VDR-M20      | D110)                | HL-D08/D120    |
| Panasonic | CAMCORDER     | VDR-M30 DVD  | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-M50 DVD  | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-M53      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-M54      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-M55      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-M70 DVD  | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-M75      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VDR-M95      | VWVBG1               | HL-U07         |
| Panasonic | CAMCORDER     | VM-E340A     | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER     | VM-E530A     | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER     | VM-E535LA    | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER     | VM-E540LA    | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER     | VM-E545LS    | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER     | VM-E555LA    | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER     | VM-E635LA    | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER     | VM-E645LA    | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER     | VM-E755LA    | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER     | VM-E855LA    | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | CAMCORDER     | VMH-835LA    | VW-VBD1/CGA-B202     | HL-VBD1        |
| Panasonic | DIGITALCAMERA | DMC-F1B      | CGA-S001             | HL-001         |
| Panasonic | DIGITALCAMERA | DMC-F1EA     | CGA-S001             | HL-001         |
| Panasonic | DIGITALCAMERA | DMC-F1EK     | CGA-S001             | HL-001         |
| Panasonic | DIGITALCAMERA | DMC-F1ER     | CGA-S001             | HL-001         |
| Panasonic | DIGITALCAMERA | DMC-F1ES     | CGA-S001             | HL-001         |
| Panasonic | DIGITALCAMERA | DMC-F1K      | CGA-S002             | HL-002         |
| Panasonic | DIGITALCAMERA | DMC-F1S      | CGA-S002             | HL-002         |
| Panasonic | DIGITALCAMERA | DMC-F2       | DMW-BCF10E           | HL-PF10E       |
| Panasonic | DIGITALCAMERA | DMC-F3K      | DMW-BCF10E           | HL-PF10E       |
| Panasonic | DIGITALCAMERA | DMC-FH1A     | DMW-BCF10E           | HL-PF10E       |
| Panasonic | DIGITALCAMERA | DMC-FH20     | DMW-BCF10E           | HL-PF10E       |
| Panasonic | DIGITALCAMERA | DMC-FH22     | DMW-BCF10E           | HL-PF10E       |
| Panasonic | DIGITALCAMERA | DMC-FH3A     | DMW-BCF10E           | HL-PF10E       |
| Panasonic | DIGITALCAMERA | DMC-FS11     | DMW-BCF10E           | HL-PF10E       |
| Panasonic | DIGITALCAMERA | DMC-FS15     | DMW-BCF10E           | HL-PF10E       |
| Panasonic | DIGITALCAMERA | DMC-FS20     | CGA-S008 / DMW-BCE10 | HL-008 / E10   |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Panasonic     | DIGITALCAMERA      | DMC-FS25            | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FS3             | CGA-S008 / DMW-BCE10    | HL-008 / E10          |
| Panasonic     | DIGITALCAMERA      | DMC-FS30            | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FS33            | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FS5             | CGA-S008 / DMW-BCE10    | HL-008 / E10          |
| Panasonic     | DIGITALCAMERA      | DMC-FS6             | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FS62            | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FS7             | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FT2             | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FX01            | CGA-S005                | HL-005                |
| Panasonic     | DIGITALCAMERA      | DMC-FX07            | CGA-S005                | HL-005                |
| Panasonic     | DIGITALCAMERA      | DMC-FX1             | CGA-S001                | HL-001                |
| Panasonic     | DIGITALCAMERA      | DMC-FX10            | CGA-S005                | HL-005                |
| Panasonic     | DIGITALCAMERA      | DMC-FX100           | CGA-S005                | HL-005                |
| Panasonic     | DIGITALCAMERA      | DMC-FX12            | CGA-S005                | HL-005                |
| Panasonic     | DIGITALCAMERA      | DMC-FX150           | CGA-S005                | HL-005                |
| Panasonic     | DIGITALCAMERA      | DMC-FX2             | CGA-S004                | HL-004                |
| Panasonic     | DIGITALCAMERA      | DMC-FX3             | CGA-S005                | HL-005                |
| Panasonic     | DIGITALCAMERA      | DMC-FX30            | CGA-S008 / DMW-BCE10    | HL-008 / E10          |
| Panasonic     | DIGITALCAMERA      | DMC-FX33            | CGA-S008 / DMW-BCE10    | HL-008 / E10          |
| Panasonic     | DIGITALCAMERA      | DMC-FX35            | CGA-S008 / DMW-BCE10    | HL-008 / E10          |
| Panasonic     | DIGITALCAMERA      | DMC-FX37            | CGA-S008 / DMW-BCE10    | HL-008 / E10          |
| Panasonic     | DIGITALCAMERA      | DMC-FX40            | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FX48            | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FX5             | CGA-S001                | HL-001                |
| Panasonic     | DIGITALCAMERA      | DMC-FX50            | CGA-S005                | HL-005                |
| Panasonic     | DIGITALCAMERA      | DMC-FX500           | CGA-S008 / DMW-BCE10    | HL-008 / E10          |
| Panasonic     | DIGITALCAMERA      | DMC-FX520           | CGA-S008 / DMW-BCE10    | HL-008 / E10          |
| Panasonic     | DIGITALCAMERA      | DMC-FX55            | CGA-S008 / DMW-BCE10    | HL-008 / E10          |
| Panasonic     | DIGITALCAMERA      | DMC-FX550           | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FX580           | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FX66            | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FX68            | DMW-BCF10E              | HL-PF10E              |
| Panasonic     | DIGITALCAMERA      | DMC-FX7             | CGA-S004                | HL-004                |
| Panasonic     | DIGITALCAMERA      | DMC-FX8             | CGA-S005                | HL-005                |
| Panasonic     | DIGITALCAMERA      | DMC-FX9             | CGA-S005                | HL-005                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ10K           | CGA-S002                | HL-002                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ10S           | CGA-S002                | HL-002                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ15K           | CGA-S002                | HL-002                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ18            | CGA-S006                | HL-006                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ1B            | CGA-S002                | HL-002                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ1K            | CGA-S002                | HL-002                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ2             | CGA-S002                | HL-002                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ20            | CGA-S002                | HL-002                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ28            | CGA-S006                | HL-006                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ3             | CGA-S002                | HL-002                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ30            | CGA-S006                | HL-006                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ4             | CGA-S002                | HL-002                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ5             | CGA-S002                | HL-002                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ50            | CGA-S006                | HL-006                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ7             | CGA-S006                | HL-006                |
| Panasonic     | DIGITALCAMERA      | DMC-FZ8             | CGA-S006                | HL-006                |
| Panasonic     | DIGITALCAMERA      | DMC-G1              | DMW-BLB13E              | HL-PB13               |
| Panasonic     | DIGITALCAMERA      | DMC-G10 SLR         | DMW-BLB13E              | HL-PB13               |
| Panasonic     | DIGITALCAMERA      | DMC-G2 SLR          | DMW-BLB13E              | HL-PB13               |
| Panasonic     | DIGITALCAMERA      | DMC-GF1             | DMW-BLB13E              | HL-PB13               |
| Panasonic     | DIGITALCAMERA      | DMC-GH1             | DMW-BLB13E              | HL-PB13               |
| Panasonic     | DIGITALCAMERA      | DMC-LC20            | AA                      | Go                    |
| Panasonic     | DIGITALCAMERA      | DMC-LC33            | AA                      | AA Mignon 2700mAh     |
| Panasonic     | DIGITALCAMERA      | DMC-LC43            | AA                      | AA Mignon 2700mAh     |

| Vendor    | Camera Type   | Camera Model   | Original Battery | Hahnel Battery    |
|-----------|---------------|----------------|------------------|-------------------|
| Panasonic | DIGITALCAMERA | DMC-LC50       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LC70       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LC80       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LS1        | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LS2        | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LS60       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LS70       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LS75       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LS80       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LS85       | AA               | AA Mignon 2350mAh |
| Panasonic | DIGITALCAMERA | DMC-LS85       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LS85       | AA               | Go                |
| Panasonic | DIGITALCAMERA | DMC-LX1        | CGA-S005         | HL-005            |
| Panasonic | DIGITALCAMERA | DMC-LX2        | CGA-S005         | HL-005            |
| Panasonic | DIGITALCAMERA | DMC-LX3        | CGA-S005         | HL-005            |
| Panasonic | DIGITALCAMERA | DMC-LZ1        | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LZ10       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LZ2        | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LZ3        | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LZ5        | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LZ6        | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LZ7        | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-LZ8        | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | DMC-TZ1        | CGA-S007         | HL-007            |
| Panasonic | DIGITALCAMERA | DMC-TZ2        | CGA-S007         | HL-007            |
| Panasonic | DIGITALCAMERA | DMC-TZ3        | CGA-S007         | HL-007            |
| Panasonic | DIGITALCAMERA | DMC-TZ4        | CGA-S007         | HL-007            |
| Panasonic | DIGITALCAMERA | DMC-TZ5        | CGA-S007         | HL-007            |
| Panasonic | DIGITALCAMERA | DMC-TZ6        | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | DMC-TZ7        | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | DMC-ZR3        | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | DMC-ZS1        | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | DMC-ZS2        | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | DMC-ZS3        | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | DMC-ZS5        | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | DMC-ZS7        | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | DMC-ZX3        | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | FT2            | DMW-BCF10E       | HL-PF10E          |
| Panasonic | DIGITALCAMERA | FX7            | CGA-S004         | HL-004            |
| Panasonic | DIGITALCAMERA | FX8            | CGA-S005         | HL-005            |
| Panasonic | DIGITALCAMERA | Lumix DMC-FX60 | DMW-BCF10E       | HL-PF10E          |
| Panasonic | DIGITALCAMERA | Lumix DMC-FX65 | DMW-BCF10E       | HL-PF10E          |
| Panasonic | DIGITALCAMERA | Lumix DMC-FZ35 | CGA-S006         | HL-006            |
| Panasonic | DIGITALCAMERA | Lumix DMC-FZ38 | CGA-S006         | HL-006            |
| Panasonic | DIGITALCAMERA | Lumix DMC-ZR1  | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | Lumix DMC-ZX1  | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | LX1            | CGA-S005         | HL-005            |
| Panasonic | DIGITALCAMERA | NV-DCF1        | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | NV-DCF2E       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | NV-DCF5E       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | NV-DCF7E       | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | PV-DC2090      | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | PV-DC2590      | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | PV-DC3000      | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | PV-DC3010      | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | PV-SD4090      | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | PV-SD5000      | AA               | AA Mignon 2700mAh |
| Panasonic | DIGITALCAMERA | TZ10           | DMW-BCG10E       | HL-PG10E          |
| Panasonic | DIGITALCAMERA | TZ8            | DMW-BCG10E       | HL-PG10E          |
| Pentacoon | DIGITALCAMERA | DC21           | AA               | AA Mignon 2700mAh |

| Vendor    | Camera Type   | Camera Model     | Original Battery | Hahnel Battery    |
|-----------|---------------|------------------|------------------|-------------------|
| Pentaccon | DIGITALCAMERA | EXACTA DC2100    | AA               | AA Mignon 2700mAh |
| Pentaccon | DIGITALCAMERA | Luxmedia 5202    | AA               | AA Mignon 2700mAh |
| Pentaccon | DIGITALCAMERA | Luxmedia 5203    | AA               | AA Mignon 2700mAh |
| Pentaccon | DIGITALCAMERA | PRAKTIKA DCZ 3.2 | AA               | AA Mignon 2700mAh |
| Pentaccon | DIGITALCAMERA | LCD              | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | *ist D           | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | *ist D L2        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | *ist D S2        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | *ist DS          | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | 645D SLR         | D-Li90           | HL-PL90           |
| Pentax    | DIGITALCAMERA | A40              | D-Li68           | HL-PL68           |
| Pentax    | DIGITALCAMERA | DigiBino DB200   | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | E1-100           | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | E1-200           | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | E1-2000          | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | i-10             | D-Li92           | HL-PL92           |
| Pentax    | DIGITALCAMERA | K100D SLR        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | K100D SUPER SLR  | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | K10D SLR         | D-Li50           | HL-PL50           |
| Pentax    | DIGITALCAMERA | K110D SLR        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | K200D SLR        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | K20D SLR         | D-Li50           | HL-PL50           |
| Pentax    | DIGITALCAMERA | K-7 SLR          | D-Li90           | HL-PL90           |
| Pentax    | DIGITALCAMERA | K-m              | AA               | Go                |
| Pentax    | DIGITALCAMERA | K-x SLR          | AA               | Go                |
| Pentax    | DIGITALCAMERA | M30              | D-Li68           | HL-PL68           |
| Pentax    | DIGITALCAMERA | OPTIO 230        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO 30         | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO 330        | D-Li2            | HL-PL12           |
| Pentax    | DIGITALCAMERA | OPTIO 330RS      | D-Li2            | HL-PL12           |
| Pentax    | DIGITALCAMERA | OPTIO 33L        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO 33LF       | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO 33WR       | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO 430        | D-Li2            | HL-PL12           |
| Pentax    | DIGITALCAMERA | OPTIO 430RS      | D-Li2            | HL-PL12           |
| Pentax    | DIGITALCAMERA | OPTIO 43WR       | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO 450        | D-Li7            | HL-PL17           |
| Pentax    | DIGITALCAMERA | OPTIO 50L        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO 550        | D-Li7            | HL-PL17           |
| Pentax    | DIGITALCAMERA | OPTIO 555        | D-Li7            | HL-PL17           |
| Pentax    | DIGITALCAMERA | OPTIO 750Z       | D-Li7            | HL-PL17           |
| Pentax    | DIGITALCAMERA | OPTIO A10        | D-Li8            | HL-PL18           |
| Pentax    | DIGITALCAMERA | OPTIO A20        | D-Li8            | HL-PL18           |
| Pentax    | DIGITALCAMERA | Optio A30        | D-Li8            | HL-PL18           |
| Pentax    | DIGITALCAMERA | OPTIO E10        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO E20        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | Optio E30        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | Optio E40        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO E50        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO E60        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO E70        | AA               | AA Mignon 2350mAh |
| Pentax    | DIGITALCAMERA | OPTIO E70        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | OPTIO E70        | AA               | Go                |
| Pentax    | DIGITALCAMERA | Optio E80        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | Optio E80        | AA               | Go                |
| Pentax    | DIGITALCAMERA | Optio E90        | AA               | Go                |
| Pentax    | DIGITALCAMERA | Optio H90        | D-Li88           | HL-PL88           |
| Pentax    | DIGITALCAMERA | Optio M10        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | Optio M20        | AA               | AA Mignon 2700mAh |
| Pentax    | DIGITALCAMERA | Optio M30        | D-Li63           | HL-PL63           |

| <b>Vendor</b>   | <b>Camera Type</b> | <b>Camera Model</b>  | <b>Original Battery</b> | <b>Hahnel Battery</b>    |
|-----------------|--------------------|----------------------|-------------------------|--------------------------|
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio M40</b>     | D-Li63                  | <b>HL-PL63</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO M50</b>     | D-Li78                  | <b>HL-PL78</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO M60</b>     | D-Li78                  | <b>HL-PL78</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO Mx</b>      | D-Li7                   | <b>HL-PL17</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO P70</b>     | D-Li88                  | <b>HL-PL88</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio P80</b>     | D-Li88                  | <b>HL-PL88</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S</b>       | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S10</b>     | D-Li68                  | <b>HL-PL68</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S12</b>     | D-Li68                  | <b>HL-PL68</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S30</b>     | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S4</b>      | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S40</b>     | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S4i</b>     | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S50</b>     | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S5i</b>     | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S5N</b>     | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S5z</b>     | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S6</b>      | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S60</b>     | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO S7</b>      | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO SV</b>      | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO Svi</b>     | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio T10</b>     | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio T30</b>     | D-Li63                  | <b>HL-PL63</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio V10</b>     | D-Li63                  | <b>HL-PL63</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio V20</b>     | D-Li78                  | <b>HL-PL78</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio W10</b>     | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio W20</b>     | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio W30</b>     | D-Li63                  | <b>HL-PL63</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio W30</b>     | D-Li68                  | <b>HL-PL68</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO W60</b>     | D-Li78                  | <b>HL-PL78</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio W80</b>     | D-Li78                  | <b>HL-PL78</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO WP</b>      | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO Wpi</b>     | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>Optio WS80</b>    | D-Li88                  | <b>HL-PL88</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>OPTIO X</b>       | D-Li8                   | <b>HL-PL18</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>W90</b>           | D-Li88                  | <b>HL-PL88</b>           |
| <b>Pentax</b>   | DIGITALCAMERA      | <b>X70</b>           | D-Li92                  | <b>HL-PL92</b>           |
| <b>Polaroid</b> | DIGITALCAMERA      | <b>DS5370</b>        | Li-40B / Li-42B         | <b>HL-42B / 40B</b>      |
| <b>Polaroid</b> | DIGITALCAMERA      | <b>PDC-2300Z</b>     | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Premier</b>  | DIGITALCAMERA      | <b>DC 2300</b>       | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Premier</b>  | DIGITALCAMERA      | <b>DC 3310</b>       | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio 300G</b>   | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio 400G</b>   | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio GX</b>     | NP-120                  | <b>HL-F120</b>           |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio GX8</b>    | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio Pro G3</b> | AA                      | <b>Go</b>                |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio R1</b>     | AA                      | <b>Go</b>                |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio R3</b>     | CGA-S005                | <b>HL-005</b>            |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio R4</b>     | CGA-S005                | <b>HL-005</b>            |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio R5</b>     | CGA-S005                | <b>HL-005</b>            |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio R6</b>     | DB-70                   | <b>HL-DB70</b>           |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio R7</b>     | DB-70                   | <b>HL-DB70</b>           |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio R8</b>     | DB-70                   | <b>HL-DB70</b>           |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio RX</b>     | AA                      | <b>Go</b>                |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>Caplio RZ1</b>    | AA                      | <b>Go</b>                |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>CX1</b>           | DB-70                   | <b>HL-DB70</b>           |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>G3</b>            | AA                      | <b>Go</b>                |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>G3M</b>           | AA                      | <b>Go</b>                |
| <b>Ricoh</b>    | DIGITALCAMERA      | <b>G3S</b>           | AA                      | <b>Go</b>                |

| Vendor  | Camera Type   | Camera Model | Original Battery | Hahnel Battery    |
|---------|---------------|--------------|------------------|-------------------|
| Ricoh   | DIGITALCAMERA | G4           | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | GR Digital   | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | PR1          | NP-80            | HL-F80            |
| Ricoh   | DIGITALCAMERA | RDC 7        | NP-80            | HL-F80            |
| Ricoh   | DIGITALCAMERA | RDC-2        | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | RDC-300      | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | RDC-300Z     | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | RDC-4200     | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | RDC-4300     | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | RDC-5000     | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | RDC-5300     | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | RDC-6000     | NP-80            | HL-F80            |
| Ricoh   | DIGITALCAMERA | RDC-i500     | NP-80            | HL-F80            |
| Ricoh   | DIGITALCAMERA | RR1          | NP-80            | HL-F80            |
| Ricoh   | DIGITALCAMERA | RR120        | AA               | Go                |
| Ricoh   | DIGITALCAMERA | RR211        | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | RR230        | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | RR30         | NP-60            | HL-F60            |
| Ricoh   | DIGITALCAMERA | RR330        | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | RR530        | AA               | AA Mignon 2700mAh |
| Ricoh   | DIGITALCAMERA | RR660        | AA               | AA Mignon 2700mAh |
| Rollei  | DIGITALCAMERA | d33 COM      | AA               | AA Mignon 2700mAh |
| Rollei  | DIGITALCAMERA | d330         | AA               | AA Mignon 2700mAh |
| Rollei  | DIGITALCAMERA | d41 COM      | AA               | AA Mignon 2700mAh |
| Rollei  | DIGITALCAMERA | d530         | AA               | AA Mignon 2700mAh |
| Rollei  | DIGITALCAMERA | d7 COM       | AA               | AA Mignon 2700mAh |
| Rollei  | DIGITALCAMERA | Prego DP4200 | 4200/5200        | HL-R5200          |
| Rollei  | DIGITALCAMERA | Prego DP5200 | 4200/5200        | HL-R5200          |
| Samsung | CAMCORDER     | HMX-H100     | IA-BP85ST        | HL-S85ST          |
| Samsung | CAMCORDER     | HMX-H104     | IA-BP85ST        | HL-S85ST          |
| Samsung | CAMCORDER     | HMX-H105     | IA-BP85ST        | HL-S85ST          |
| Samsung | CAMCORDER     | HMX-H106     | IA-BP85ST        | HL-S85ST          |
| Samsung | CAMCORDER     | HMX-M20      | IA-BH125C        | HL-S125C          |
| Samsung | CAMCORDER     | HMX-R10      | IA-BH125C        | HL-S125C          |
| Samsung | CAMCORDER     | IA-DX10      | IA-BP85ST        | HL-S85ST          |
| Samsung | CAMCORDER     | SC-351       | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-352       | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-352i      | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-353i      | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-354       | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-355       | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-357       | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-D103      | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D107      | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D20       | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D21       | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D23       | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D24       | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D263      | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-D27       | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D29       | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D303      | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D31       | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D33       | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D34       | SB-L110          | HL-110S           |
| Samsung | CAMCORDER     | SC-D352      | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-D353      | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-D355      | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-D362      | SB-LSM80         | HL-SM80           |
| Samsung | CAMCORDER     | SC-D363      | SB-LSM80         | HL-SM80           |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Samsung       | CAMCORDER          | SC-D364             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-D365             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-D366             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-D39              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | SC-D453             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-D455             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-D457             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-D530             | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | SC-D590             | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | SC-D6040            | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | SC-D6550            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-D903             | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | SC-D93              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | SC-D953             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-D955             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-D963             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-D99              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | SC-DC164            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-DC165            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-DC563            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-DC564            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-DC565            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | SC-HMX20C           | IA-BP85ST               | HL-S85ST              |
| Samsung       | CAMCORDER          | SC-L750             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | SC-L810             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | SC-L860             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | SC-L870             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | SC-L901             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | SC-L906             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | SC-MX20             | IA-BP85ST               | HL-S85ST              |
| Samsung       | CAMCORDER          | SC-W80              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | SC-W87              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | SC-X105L            | AA                      | AA Mignon 2700mAh     |
| Samsung       | CAMCORDER          | SMX-F30             | IA-BP85ST               | HL-S85ST              |
| Samsung       | CAMCORDER          | SMX-F33             | IA-BP85ST               | HL-S85ST              |
| Samsung       | CAMCORDER          | SMX-F34             | IA-BP85ST               | HL-S85ST              |
| Samsung       | CAMCORDER          | VP361               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP362               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP363               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP364               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP366               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP461               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP463               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP467               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP651               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP653               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP655               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP963               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP965               | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D10              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D130             | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D161             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D190             | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D20              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D21              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D23              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D230             | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D24              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D250             | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D26              | SB-L110                 | HL-110S               |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Samsung       | CAMCORDER          | VP-D270             | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D30              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D31              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D33              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D34              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D351             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D352i            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D353i            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D354             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D355             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D371             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D372WH           | SB-LSM160               | HL-SM160              |
| Samsung       | CAMCORDER          | VP-D372WH           | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D375W            | SB-LSM160               | HL-SM160              |
| Samsung       | CAMCORDER          | VP-D375W            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D381             | IS-BP80W                | HL-S80W               |
| Samsung       | CAMCORDER          | VP-D382             | IS-BP80W                | HL-S80W               |
| Samsung       | CAMCORDER          | VP-D384             | IS-BP80W                | HL-S80W               |
| Samsung       | CAMCORDER          | VP-D385             | IS-BP80W                | HL-S80W               |
| Samsung       | CAMCORDER          | VP-D39              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D391             | IS-BP80W                | HL-S80W               |
| Samsung       | CAMCORDER          | VP-D451             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D452             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D453i            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D454             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D455             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D530             | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D55              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D552             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D557             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D590             | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D60              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D65              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D650             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D651             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D653             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D655             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D67              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D70              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D73              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D75              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D77              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D80              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D87              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D905             | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D93              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D953             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D955             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D957             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D959             | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D964W            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-D97              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-D99              | SB-L110                 | HL-110S               |
| Samsung       | CAMCORDER          | VP-DC161            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-DC163            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-DC165            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-DC563            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-DC565            | SB-LSM80                | HL-SM80               |
| Samsung       | CAMCORDER          | VP-DX100            | IS-BP80W                | HL-S80W               |
| Samsung       | CAMCORDER          | VP-DX205I           | IS-BP80W                | HL-S80W               |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Samsung       | CAMCORDER          | VP-L500             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L520             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L530             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L600             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L610             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L630             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L700             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L710             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L750             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L770             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L800             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L850             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-L860             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-M50              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-M51              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-M52              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-M53              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VPMX10              | IA-BP85ST               | HL-S85ST              |
| Samsung       | CAMCORDER          | VP-MX20             | IA-BP85ST               | HL-S85ST              |
| Samsung       | CAMCORDER          | VP-SD20             | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-W60              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-W61              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-W70              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-W71              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-W75              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-W76              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-W80              | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-W800U            | SB-L160/110A            | HL-160S               |
| Samsung       | CAMCORDER          | VP-W87              | SB-L160/110A            | HL-160S               |
| Samsung       | DIGITALCAMERA      | CL5                 | SLB-0937                | HL-S0937              |
| Samsung       | DIGITALCAMERA      | CL65                | SLB-11A                 | HL-S11A               |
| Samsung       | DIGITALCAMERA      | CL80                | SLB-11A                 | HL-S11A               |
| Samsung       | DIGITALCAMERA      | Cybermax            | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Cybermax PLUS       | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 101         | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 130         | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 200         | AA                      | Go                    |
| Samsung       | DIGITALCAMERA      | Digimax 201         | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 210AF       | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 210SE       | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 230         | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 240         | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 330         | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 340         | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 350SE       | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 35MP3       | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 410         | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 420         | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 50 DUO      | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax 800         | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax A400        | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax A402        | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax A5          | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax A50         | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax A502        | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax A503        | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax A55W        | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax A6          | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax A7          | AA                      | AA Mignon 2700mAh     |
| Samsung       | DIGITALCAMERA      | Digimax D202        | AA                      | AA Mignon 2700mAh     |

| Vendor  | Camera Type   | Camera Model    | Original Battery | Hahnel Battery    |
|---------|---------------|-----------------|------------------|-------------------|
| Samsung | DIGITALCAMERA | Digimax D250    | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax D301    | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax D370    | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax D401    | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax D430    | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax D530    | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax i5      | SLB-0737         | HL-S0737          |
| Samsung | DIGITALCAMERA | Digimax i6 PMP  | SLB-0837         | HL-S0837          |
| Samsung | DIGITALCAMERA | Digimax i60     | SLB-0837         | HL-S0837          |
| Samsung | DIGITALCAMERA | Digimax i85     | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | Digimax L50     | SLB-0837         | HL-S0837          |
| Samsung | DIGITALCAMERA | Digimax L55W    | SLB-1237         | HL-S1237          |
| Samsung | DIGITALCAMERA | Digimax L60     | SLB-0837         | HL-S0837          |
| Samsung | DIGITALCAMERA | Digimax L73     | SLB-0837         | HL-S0837          |
| Samsung | DIGITALCAMERA | Digimax L80     | SLB-0837         | HL-S0837          |
| Samsung | DIGITALCAMERA | Digimax L85     | SLB-1237         | HL-S1237          |
| Samsung | DIGITALCAMERA | Digimax S500    | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax S600    | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax S750    | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax S800    | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax U-CA3   | SLB-1137         | HL-S1137          |
| Samsung | DIGITALCAMERA | Digimax U-CA4   | SLB-1137         | HL-S1137          |
| Samsung | DIGITALCAMERA | Digimax U-CA401 | SLB-1137         | HL-S1137          |
| Samsung | DIGITALCAMERA | Digimax U-CA5   | SLB-1137         | HL-S1137          |
| Samsung | DIGITALCAMERA | Digimax U-CA505 | SLB-1137         | HL-S1137          |
| Samsung | DIGITALCAMERA | Digimax V3      | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax V4      | AA               | Go                |
| Samsung | DIGITALCAMERA | Digimax V4000   | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax V5      | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax V50     | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax V6      | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax V600    | SLB-1137         | HL-S1137          |
| Samsung | DIGITALCAMERA | Digimax V70     | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | Digimax V700    | SLB-1137         | HL-S1137          |
| Samsung | DIGITALCAMERA | ES10            | AA               | AA Mignon 2350mAh |
| Samsung | DIGITALCAMERA | ES10            | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | ES10            | AA               | Go                |
| Samsung | DIGITALCAMERA | ES15            | AA               | AA Mignon 2350mAh |
| Samsung | DIGITALCAMERA | ES15            | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | ES15            | AA               | Go                |
| Samsung | DIGITALCAMERA | ES55            | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | GX-10 (SLR)     | SLB-1674         | HL-S1674          |
| Samsung | DIGITALCAMERA | GX-1L SLR       | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | GX-1S SLR       | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | GX-20 SLR       | SLB-1674         | HL-S1674          |
| Samsung | DIGITALCAMERA | HZ10W           | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | HZ15W           | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | HZ25W           | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | HZ30W           | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | HZ35W           | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | i100            | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | i7              | SLB-1137C        | HL-S1137C         |
| Samsung | DIGITALCAMERA | i70             | SLB-0837         | HL-S0837          |
| Samsung | DIGITALCAMERA | i8              | SLB-0937         | HL-S0937          |
| Samsung | DIGITALCAMERA | i8              | SLB-0937         | HL-S0937          |
| Samsung | DIGITALCAMERA | i80             | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | i85             | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | i85             | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | IT100           | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | L100            | SLB-10A          | HL-S10A           |

| Vendor  | Camera Type   | Camera Model  | Original Battery | Hahnel Battery    |
|---------|---------------|---------------|------------------|-------------------|
| Samsung | DIGITALCAMERA | L100          | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | L110          | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | L110          | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | L201          | SLB-0837         | HL-S0837B         |
| Samsung | DIGITALCAMERA | L210          | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | L210          | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | L310W         | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | L70           | SLB-0837         | HL-S0837B         |
| Samsung | DIGITALCAMERA | L700          | SLB-0837         | HL-S0837          |
| Samsung | DIGITALCAMERA | L73           | SLB-0837         | HL-S0837          |
| Samsung | DIGITALCAMERA | L730          | SLB-0937         | HL-S0937          |
| Samsung | DIGITALCAMERA | L74 WIDE      | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | L77           | SLB-0637         | HL-S0637          |
| Samsung | DIGITALCAMERA | L830          | SLB-0937         | HL-S0937          |
| Samsung | DIGITALCAMERA | L83T          | SLB-0837         | HL-S0837B         |
| Samsung | DIGITALCAMERA | L83T          | SLB-0837         | HL-S0837B         |
| Samsung | DIGITALCAMERA | NV10          | SLB-0837         | HL-S0837B         |
| Samsung | DIGITALCAMERA | NV100HD       | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | NV11          | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | NV15          | SLB-0837         | HL-S0837B         |
| Samsung | DIGITALCAMERA | NV15          | SLB-0837         | HL-S0837B         |
| Samsung | DIGITALCAMERA | NV20          | SLB-0837         | HL-S0837B         |
| Samsung | DIGITALCAMERA | NV20          | SLB-0837         | HL-S0837B         |
| Samsung | DIGITALCAMERA | NV24HD        | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | NV3           | SLB-0837         | HL-S0837          |
| Samsung | DIGITALCAMERA | NV30          | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | NV30          | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | NV4           | SLB-0937         | HL-S0937          |
| Samsung | DIGITALCAMERA | NV40          | SLB-1137D        | HL-S1137D         |
| Samsung | DIGITALCAMERA | NV7 OPS       | SLB-0837         | HL-S0837          |
| Samsung | DIGITALCAMERA | NV8           | SLB-0837         | HL-S0837B         |
| Samsung | DIGITALCAMERA | NV8           | SLB-0837         | HL-S0837B         |
| Samsung | DIGITALCAMERA | NV9           | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | NX10 HYBRID   | BP-S1310         | HL-S1310          |
| Samsung | DIGITALCAMERA | PL10          | SLB-0937         | HL-S0937          |
| Samsung | DIGITALCAMERA | PL100         | SLB-07A          | HL-S07A           |
| Samsung | DIGITALCAMERA | PL150 (TL210) | SLB-07A          | HL-S07A           |
| Samsung | DIGITALCAMERA | PL50          | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | PL60          | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | PL65          | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | PL80          | BP-70A           | HL-S70A           |
| Samsung | DIGITALCAMERA | S1030         | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | S1050         | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | S1070         | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | S1830         | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | S630          | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | S730          | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | S760          | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | S85           | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | S850          | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | S860          | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | SL102         | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | SL202         | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | SL30          | AA               | AA Mignon 2350mAh |
| Samsung | DIGITALCAMERA | SL30          | AA               | AA Mignon 2700mAh |
| Samsung | DIGITALCAMERA | SL30          | AA               | Go                |
| Samsung | DIGITALCAMERA | SL420         | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | SL50          | BP-70A           | HL-S70A           |
| Samsung | DIGITALCAMERA | SL600         | BP-70A           | HL-S70A           |
| Samsung | DIGITALCAMERA | SL620         | SLB-10A          | HL-S10A           |

| Vendor  | Camera Type   | Camera Model      | Original Battery | Hahnel Battery    |
|---------|---------------|-------------------|------------------|-------------------|
| Samsung | DIGITALCAMERA | SL630             | BP-70A           | HL-S70A           |
| Samsung | DIGITALCAMERA | SL820             | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | ST10              | SLB-0937         | HL-S0937          |
| Samsung | DIGITALCAMERA | ST100             | SLB-0937         | HL-S0937          |
| Samsung | DIGITALCAMERA | ST1000            | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | ST50              | SLB-07A          | HL-S07A           |
| Samsung | DIGITALCAMERA | ST500             | SLB-07A          | HL-S07A           |
| Samsung | DIGITALCAMERA | ST5000            | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | ST550             | SLB-07A          | HL-S07A           |
| Samsung | DIGITALCAMERA | ST5500            | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | ST60              | BP-70A           | HL-S70A           |
| Samsung | DIGITALCAMERA | ST70              | BP-70A           | HL-S70A           |
| Samsung | DIGITALCAMERA | TL100             | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | TL105             | BP-70A           | HL-S70A           |
| Samsung | DIGITALCAMERA | TL110             | BP-70A           | HL-S70A           |
| Samsung | DIGITALCAMERA | TL205             | SLB-07A          | HL-S07A           |
| Samsung | DIGITALCAMERA | TL210             | SLB-07A          | HL-S07A           |
| Samsung | DIGITALCAMERA | TL220             | SLB-07A          | HL-S07A           |
| Samsung | DIGITALCAMERA | TL225             | SLB-07A          | HL-S07A           |
| Samsung | DIGITALCAMERA | TL240             | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | TL320             | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | WB100             | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | WB1000            | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | WB5000 (BRIDGE)   | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | WB550             | SLB-10A          | HL-S10A           |
| Samsung | DIGITALCAMERA | WB600             | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | WB650             | SLB-11A          | HL-S11A           |
| Samsung | DIGITALCAMERA | WM500             | SLB-10A          | HL-S10A           |
| Sanyo   | CAMCORDER     | DMX-CG10 Xacti    | DB-L80           | HL-L80            |
| Sanyo   | CAMCORDER     | VPC-CG10 Xacti    | DB-L80           | HL-L80            |
| Sanyo   | DIGITALCAMERA | VPC-AZ3 EX        | Li-10B/12B       | HL-12B            |
| Sanyo   | DIGITALCAMERA | VPC-AZI EX        | AA               | AA Mignon 2700mAh |
| Sanyo   | DIGITALCAMERA | VPC-E6U           | DB-L20           | HL-L20            |
| Sanyo   | DIGITALCAMERA | VPC-MZ1EX         | AA               | AA Mignon 2700mAh |
| Sanyo   | DIGITALCAMERA | VPC-MZ3           | Li-10B/12B       | HL-12B            |
| Sanyo   | DIGITALCAMERA | VPC-MZ3 EX        | Li-10B/12B       | HL-12B            |
| Sanyo   | DIGITALCAMERA | VPC-SX 550 EX     | AA               | AA Mignon 2700mAh |
| Sanyo   | DIGITALCAMERA | VPC-SX 560 E      | AA               | AA Mignon 2700mAh |
| Sanyo   | DIGITALCAMERA | VPC-T700          | Li-40B / Li-42B  | HL-42B / 40B      |
| Sanyo   | DIGITALCAMERA | VPC-X350          | Li-10B/12B       | HL-12B            |
| Sanyo   | DIGITALCAMERA | Xacti C1          | DB-L20           | HL-L20            |
| Sanyo   | DIGITALCAMERA | Xacti DMX-C1      | DB-L20           | HL-L20            |
| Sanyo   | DIGITALCAMERA | Xacti DMX-J4      | DB-L20           | HL-L20            |
| Sanyo   | DIGITALCAMERA | Xacti DSC-S3      | AA               | AA Mignon 2700mAh |
| Sanyo   | DIGITALCAMERA | Xacti DSC-S4      | AA               | AA Mignon 2700mAh |
| Sanyo   | DIGITALCAMERA | Xacti E6          | DB-L20           | HL-L20            |
| Sanyo   | DIGITALCAMERA | Xacti VPC-J1      | Li-10B/12B       | HL-12B            |
| Sanyo   | DIGITALCAMERA | Xacti VPC-J1 EX   | Li-10B/12B       | HL-12B            |
| Sanyo   | DIGITALCAMERA | Xacti VPC-J2 EX   | Li-10B/12B       | HL-12B            |
| Sanyo   | DIGITALCAMERA | Xacti VPC-J2BK EX | Li-10B/12B       | HL-12B            |
| Sanyo   | DIGITALCAMERA | Xacti VPC-J4      | DB-L20           | HL-L20            |
| Sanyo   | DIGITALCAMERA | Xacti VPC-S1      | AA               | AA Mignon 2700mAh |
| Sanyo   | DIGITALCAMERA | Xacti VPC-S3      | AA               | AA Mignon 2700mAh |
| Sharp   | CAMCORDER     | VL-A111H          | BT-H22           | HN-H22            |
| Sharp   | CAMCORDER     | VL-AH10           | BT-H22           | HN-H22            |
| Sharp   | CAMCORDER     | VL-AH131          | BT-H22           | HN-H22            |
| Sharp   | CAMCORDER     | VL-AH30           | BT-H22           | HN-H22            |
| Sharp   | CAMCORDER     | VL-AH50           | BT-H22           | HN-H22            |
| Sharp   | CAMCORDER     | VL-E37            | BT-H22           | HN-H22            |
| Sharp   | CAMCORDER     | VL-E47            | BT-H22           | HN-H22            |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sharp         | CAMCORDER          | VL-E66              | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-E71              | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-E720H            | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-E73              | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-E78              | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-E83              | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-E89              | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-E96              | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-E97              | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-E98              | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-E980             | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-E990             | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-H420             | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-H950             | BT-H22                  | HN-H22                |
| Sharp         | CAMCORDER          | VL-SW50             | BT-H22                  | HN-H22                |
| Si Pix        | DIGITALCAMERA      | Fashion Cam         | AA                      | AA Mignon 2700mAh     |
| Si Pix        | DIGITALCAMERA      | Fashion Style       | AA                      | AA Mignon 2700mAh     |
| Si Pix        | DIGITALCAMERA      | SC-1300             | AA                      | AA Mignon 2700mAh     |
| Si Pix        | DIGITALCAMERA      | SC-2300             | AA                      | AA Mignon 2700mAh     |
| Si Pix        | DIGITALCAMERA      | SCP-1000            | AA                      | AA Mignon 2700mAh     |
| Si Pix        | DIGITALCAMERA      | SP-1300             | AA                      | AA Mignon 2700mAh     |
| Sigma         | DIGITALCAMERA      | SD-10               | AA                      | AA Mignon 2700mAh     |
| Sigma         | DIGITALCAMERA      | SD-14               | NP-400                  | HL-KM400              |
| Sigma         | DIGITALCAMERA      | SD-9                | AA                      | AA Mignon 2700mAh     |
| Sony          | CAMCORDER          | CCD-SC5             | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-SC5             | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-SC5             | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-SC55            | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-SC55            | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-SC55            | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-SC65            | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-SC65            | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-SC65            | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TR1100          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TR1100          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TR1100          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TR1E            | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TR1E            | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TR1E            | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TR200           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TR200           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TR200           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TR205           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TR205           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TR205           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TR2200          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TR2200          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TR2200          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TR3100          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TR3100          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TR3100          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TR3200          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TR3200          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TR3200          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TR411           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TR411           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TR411           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TR416           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TR416           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TR416           | NP-F930/F950/F970       | HL-XL982              |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR417</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR417</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR417</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR425</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR425</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR425</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR427</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR427</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR427</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR500</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR500</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR500</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR511</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR511</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR511</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR515</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR515</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR515</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR516</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR516</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR516</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR517</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR517</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR517</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR640</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR640</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR640</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR7000</b>   | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR7000</b>   | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR7000</b>   | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR713</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR713</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR713</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR716</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR716</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR716</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR717</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR717</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR717</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR728</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR728</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR728</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR820</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR820</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR820</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR825</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR825</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR825</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR840</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR840</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR840</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR845</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR845</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR845</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR87</b>     | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR87</b>     | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR87</b>     | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR910</b>    | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR910</b>    | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>CCD-TR910</b>    | NP-F930/F950/F970       | <b>HL-XL982</b>       |

| Vendor | Camera Type | Camera Model | Original Battery  | Hahnel Battery |
|--------|-------------|--------------|-------------------|----------------|
| Sony   | CAMCORDER   | CCD-TR913    | NP-F530/F550/F570 | HL-XL581       |
| Sony   | CAMCORDER   | CCD-TR913    | NP-F730/F750/F770 | HL-XL782       |
| Sony   | CAMCORDER   | CCD-TR913    | NP-F930/F950/F970 | HL-XL982       |
| Sony   | CAMCORDER   | CCD-TR917    | NP-F530/F550/F570 | HL-XL581       |
| Sony   | CAMCORDER   | CCD-TR917    | NP-F730/F750/F770 | HL-XL782       |
| Sony   | CAMCORDER   | CCD-TR917    | NP-F930/F950/F970 | HL-XL982       |
| Sony   | CAMCORDER   | CCD-TR918    | NP-F530/F550/F570 | HL-XL581       |
| Sony   | CAMCORDER   | CCD-TR918    | NP-F730/F750/F770 | HL-XL782       |
| Sony   | CAMCORDER   | CCD-TR918    | NP-F930/F950/F970 | HL-XL982       |
| Sony   | CAMCORDER   | CCD-TR930    | NP-F530/F550/F570 | HL-XL581       |
| Sony   | CAMCORDER   | CCD-TR930    | NP-F730/F750/F770 | HL-XL782       |
| Sony   | CAMCORDER   | CCD-TR930    | NP-F930/F950/F970 | HL-XL982       |
| Sony   | CAMCORDER   | CCD-TR940    | NP-F530/F550/F570 | HL-XL581       |
| Sony   | CAMCORDER   | CCD-TR940    | NP-F730/F750/F770 | HL-XL782       |
| Sony   | CAMCORDER   | CCD-TR940    | NP-F930/F950/F970 | HL-XL982       |
| Sony   | CAMCORDER   | CCD-TR950    | NP-F530/F550/F570 | HL-XL581       |
| Sony   | CAMCORDER   | CCD-TR950    | NP-F730/F750/F770 | HL-XL782       |
| Sony   | CAMCORDER   | CCD-TR950    | NP-F930/F950/F970 | HL-XL982       |
| Sony   | CAMCORDER   | CCD-TRV101   | NP-F530/F550/F570 | HL-XL581       |
| Sony   | CAMCORDER   | CCD-TRV101   | NP-F730/F750/F770 | HL-XL782       |
| Sony   | CAMCORDER   | CCD-TRV101   | NP-F930/F950/F970 | HL-XL982       |
| Sony   | CAMCORDER   | CCD-TRV108   | NP-FM50           | HL-IQM51       |
| Sony   | CAMCORDER   | CCD-TRV108   | NP-QM71/D         | HL-IQM71       |
| Sony   | CAMCORDER   | CCD-TRV108   | NP-QM91/D         | HL-IQM91       |
| Sony   | CAMCORDER   | CCD-TRV118   | NP-FM50           | HL-IQM51       |
| Sony   | CAMCORDER   | CCD-TRV118   | NP-QM71/D         | HL-IQM71       |
| Sony   | CAMCORDER   | CCD-TRV118   | NP-QM91/D         | HL-IQM91       |
| Sony   | CAMCORDER   | CCD-TRV120   | NP-F530/F550/F570 | HL-XL581       |
| Sony   | CAMCORDER   | CCD-TRV120   | NP-F730/F750/F770 | HL-XL782       |
| Sony   | CAMCORDER   | CCD-TRV120   | NP-F930/F950/F970 | HL-XL982       |
| Sony   | CAMCORDER   | CCD-TRV138   | NP-FM50           | HL-IQM51       |
| Sony   | CAMCORDER   | CCD-TRV138   | NP-QM71/D         | HL-IQM71       |
| Sony   | CAMCORDER   | CCD-TRV138   | NP-QM91/D         | HL-IQM91       |
| Sony   | CAMCORDER   | CCD-TRV140   | NP-FM50           | HL-IQM51       |
| Sony   | CAMCORDER   | CCD-TRV140   | NP-QM71/D         | HL-IQM71       |
| Sony   | CAMCORDER   | CCD-TRV140   | NP-QM91/D         | HL-IQM91       |
| Sony   | CAMCORDER   | CCD-TRV15    | NP-F530/F550/F570 | HL-XL581       |
| Sony   | CAMCORDER   | CCD-TRV15    | NP-F730/F750/F770 | HL-XL782       |
| Sony   | CAMCORDER   | CCD-TRV15    | NP-F930/F950/F970 | HL-XL982       |
| Sony   | CAMCORDER   | CCD-TRV16    | NP-F530/F550/F570 | HL-XL581       |
| Sony   | CAMCORDER   | CCD-TRV16    | NP-F730/F750/F770 | HL-XL782       |
| Sony   | CAMCORDER   | CCD-TRV16    | NP-F930/F950/F970 | HL-XL982       |
| Sony   | CAMCORDER   | CCD-TRV18    | NP-FM50           | HL-IQM51       |
| Sony   | CAMCORDER   | CCD-TRV18    | NP-QM71/D         | HL-IQM71       |
| Sony   | CAMCORDER   | CCD-TRV18    | NP-QM91/D         | HL-IQM91       |
| Sony   | CAMCORDER   | CCD-TRV19    | NP-FM50           | HL-IQM51       |
| Sony   | CAMCORDER   | CCD-TRV19    | NP-QM71/D         | HL-IQM71       |
| Sony   | CAMCORDER   | CCD-TRV19    | NP-QM91/D         | HL-IQM91       |
| Sony   | CAMCORDER   | CCD-TRV208   | NP-FM50           | HL-IQM51       |
| Sony   | CAMCORDER   | CCD-TRV208   | NP-QM71/D         | HL-IQM71       |
| Sony   | CAMCORDER   | CCD-TRV208   | NP-QM91/D         | HL-IQM91       |
| Sony   | CAMCORDER   | CCD-TRV215   | NP-F530/F550/F570 | HL-XL581       |
| Sony   | CAMCORDER   | CCD-TRV215   | NP-F730/F750/F770 | HL-XL782       |
| Sony   | CAMCORDER   | CCD-TRV215   | NP-F930/F950/F970 | HL-XL982       |
| Sony   | CAMCORDER   | CCD-TRV218   | NP-FM50           | HL-IQM51       |
| Sony   | CAMCORDER   | CCD-TRV218   | NP-QM71/D         | HL-IQM71       |
| Sony   | CAMCORDER   | CCD-TRV218   | NP-QM91/D         | HL-IQM91       |
| Sony   | CAMCORDER   | CCD-TRV238   | NP-FM50           | HL-IQM51       |
| Sony   | CAMCORDER   | CCD-TRV238   | NP-QM71/D         | HL-IQM71       |
| Sony   | CAMCORDER   | CCD-TRV238   | NP-QM91/D         | HL-IQM91       |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | CCD-TRV240          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV240          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV240          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV245          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV245          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV245          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV25           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV25           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV25           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV27           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV27           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV27           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV3000         | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV3000         | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV3000         | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV308          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV308          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV308          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV318          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV318          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV318          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV32           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV32           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV32           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV330          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV330          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV330          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV338          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV338          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV338          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV340          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV340          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV340          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV345          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV345          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV345          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV35           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV35           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV35           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV36           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV36           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV36           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV37           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV37           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV37           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV408          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV408          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV408          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV41           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV41           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV41           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV416          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV416          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV416          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV418          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV418          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV418          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV425          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV425          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV425          | NP-F930/F950/F970       | HL-XL982              |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | CCD-TRV427          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV427          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV427          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV43           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV43           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV43           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV46           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV46           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV46           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV48           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV48           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV48           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV50           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV50           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV50           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV57           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV57           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV57           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV58           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV58           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV58           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV59           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV59           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV59           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV608          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV608          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV608          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV615          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV615          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV615          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV62           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV62           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV62           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV620          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV620          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV620          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV64           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV64           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV64           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV65           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV65           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV65           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV66           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV66           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV66           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV67           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV67           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV67           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV68           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV68           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV68           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV69           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV69           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV69           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV716          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV716          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV716          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV717          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV717          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV717          | NP-F930/F950/F970       | HL-XL982              |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | CCD-TRV72           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV72           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV72           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV728          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV728          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV728          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV740          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV740          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV740          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV75           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV75           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV75           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV77           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV77           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV77           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV78           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV78           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV78           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV81           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV81           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV81           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV815          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV815          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV815          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV82           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV82           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV82           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV840          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV840          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV840          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV85           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV85           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV85           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV87           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV87           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV87           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV88           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV88           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV88           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV9            | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV9            | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV9            | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV90           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV90           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV90           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV900          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV900          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV900          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV93           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV93           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV93           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV930          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV930          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV930          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV94           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV94           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV94           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV940          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV940          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV940          | NP-F930/F950/F970       | HL-XL982              |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | CCD-TRV95           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV95           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV95           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV950          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV950          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV950          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | CCD-TRV98           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | CCD-TRV98           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | CCD-TRV98           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | CCD-TRV99           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | CCD-TRV99           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | CCD-TRV99           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-DVD100          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-DVD100          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-DVD100          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-DVD101          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-DVD101          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-DVD101          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-DVD103          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD105          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD106          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD106          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD106          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD108          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD108          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD108          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD109          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD109          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD109          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD200          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-DVD200          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-DVD200          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-DVD201          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-DVD201          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-DVD201          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-DVD202          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD203          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD205          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD300          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-DVD300          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-DVD300          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-DVD301          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-DVD301          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-DVD301          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-DVD305          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD306          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD306          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD306          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD308          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD308          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD308          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD403          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD404          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD405          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD406          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD406          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD406          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD408          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD408          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD408          | NP-FH70                 | HL-XH70               |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | DCR-DVD450          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD450          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD450          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD505          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD506          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD506          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD506          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD508          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD508          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD508          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD603          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD610          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD610          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD610          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD650          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD650          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD650          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD653          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD7            | NP-FA70                 | HL-XA70               |
| Sony          | CAMCORDER          | DCR-DVD703          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD710          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD710          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD710          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD755          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD803          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD805          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD810          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD810          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD810          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD905          | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-DVD91           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-DVD91           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-DVD91           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-DVD910          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-DVD910          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-DVD910          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-DVD92           | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC1 PRO         | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-HC1 PRO         | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-HC1 PRO         | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-HC14            | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-HC14            | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-HC14            | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-HC17            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC18            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC19            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC20            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC21            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC22            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC23            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC24            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC26            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC27            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-HC27            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-HC27            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-HC28            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC3 PRO         | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC30            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC32            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC35            | NP-FP50                 | HL-XP50A              |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | DCR-HC36            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC37            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-HC37            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-HC37            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-HC38            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-HC38            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-HC38            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-HC39            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC40            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC42            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC43            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC45            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-HC45            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-HC45            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-HC46            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC47            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-HC47            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-HC47            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-HC48            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-HC48            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-HC48            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-HC5             | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-HC5             | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-HC5             | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-HC51            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-HC51            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-HC51            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-HC52            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-HC52            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-HC52            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-HC62            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-HC62            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-HC62            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-HC65            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC85            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC90            | NP-FA50                 | HL-XA50               |
| Sony          | CAMCORDER          | DCR-HC94            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-HC96            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-PC1             | NP-F10/FS11             | HL-XS11               |
| Sony          | CAMCORDER          | DCR-PC1000          | NP-FA50                 | HL-XA50               |
| Sony          | CAMCORDER          | DCR-PC101           | NP-FA50                 | HL-XA50               |
| Sony          | CAMCORDER          | DCR-PC101           | NP-FA70                 | HL-XA70               |
| Sony          | CAMCORDER          | DCR-PC103           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-PC103           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-PC103           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-PC104           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-PC104           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-PC104           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-PC105           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-PC105           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-PC105           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-PC110           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-PC110           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-PC110           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-PC115           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-PC115           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-PC115           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-PC120           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-PC120           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-PC120           | NP-QM91/D               | HL-IQM91              |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | DCR-PC2             | NP-F10/FS11             | HL-XS11               |
| Sony          | CAMCORDER          | DCR-PC3             | NP-F10/FS11             | HL-XS11               |
| Sony          | CAMCORDER          | DCR-PC330           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-PC330           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-PC330           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-PC4             | NP-F10/FS11             | HL-XS11               |
| Sony          | CAMCORDER          | DCR-PC5             | NP-F10/FS11             | HL-XS11               |
| Sony          | CAMCORDER          | DCR-PC53            | NP-FA50                 | HL-XA50               |
| Sony          | CAMCORDER          | DCR-PC55/B          | NP-FA50                 | HL-XA50               |
| Sony          | CAMCORDER          | DCR-PC55/R          | NP-FA50                 | HL-XA50               |
| Sony          | CAMCORDER          | DCR-PC55/S          | NP-FA50                 | HL-XA50               |
| Sony          | CAMCORDER          | DCR-PC55/W          | NP-FA50                 | HL-XA50               |
| Sony          | CAMCORDER          | DCR-PC6             | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-PC6             | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-PC6             | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-PC8             | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-PC8             | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-PC8             | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-PC9             | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-PC9             | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-PC9             | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-PD150           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-PD150           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-PD150           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-PD170           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-PD170           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-PD170           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-SC100           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-SR100           | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-SR190           | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR190           | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR190           | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR200           | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR200           | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR200           | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR220           | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR220           | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR220           | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR290           | NP-FA50                 | HL-XA50               |
| Sony          | CAMCORDER          | DCR-SR290           | NP-FA70                 | HL-XA70               |
| Sony          | CAMCORDER          | DCR-SR300           | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR300           | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR300           | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR30E           | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-SR32            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR32            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR32            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR40            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-SR42            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR42            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR42            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR45            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR45            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR45            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR50E           | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-SR52            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR52            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR52            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR60E           | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-SR62            | NP-FH100                | HL-XH100              |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | DCR-SR62            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR62            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR65            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR65            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR65            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR67            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR67            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR67            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR70E           | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-SR72            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR72            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR72            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR82            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR82            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR82            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR85            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR85            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR85            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR87            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SR87            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SR87            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SR90E           | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-SX30            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SX30            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SX30            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SX41            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SX41            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-SX50            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SX50            | NP-FP50                 | HL-XP50A              |
| Sony          | CAMCORDER          | DCR-SX50            | NP-FP70                 | HL-XP70A              |
| Sony          | CAMCORDER          | DCR-SX60            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DCR-SX60            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DCR-SX60            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | DCR-TR238           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TR238           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TR238           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TR7000          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TR7000          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TR7000          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TR700D          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TR700D          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TR700D          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TR7100          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TR7100          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TR7100          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TR8000          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TR8000          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TR8000          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV103          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV103          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV103          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV110          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV110          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV110          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV120          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV120          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV120          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV130          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV130          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV130          | NP-F930/F950/F970       | HL-XL982              |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | DCR-TRV140          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV140          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV140          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV145          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV145          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV145          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV15           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV15           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV15           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV16           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV16           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV16           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV17           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV17           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV17           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV18           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV18           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV18           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV19           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV19           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV19           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV208          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV208          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV208          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV210          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV210          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV210          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV215          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV215          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV215          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV218          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV218          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV218          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV228          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV228          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV228          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV230          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV230          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV230          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV235          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV235          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV235          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV238          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV238          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV238          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV239          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV239          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV239          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV240          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV240          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV240          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV245          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV245          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV245          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV250          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV250          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV250          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV255          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV255          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV255          | NP-QM91/D               | HL-IQM91              |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | DCR-TRV260          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV260          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV260          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV265          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV265          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV265          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV270          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV270          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV270          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV280          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV280          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV280          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV285          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV285          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV285          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV30           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV30           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV30           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV310          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV310          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV310          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV315          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV315          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV315          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV320          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV320          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV320          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV325          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV325          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV325          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV330          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV330          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV330          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV33E          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV33E          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV33E          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV340          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV340          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV340          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV345          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV345          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV345          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV350          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV350          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV350          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV355          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV355          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV355          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV38           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV38           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV38           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV39           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV39           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV39           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV408          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV408          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV408          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV410          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV410          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV410          | NP-F930/F950/F970       | HL-XL982              |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | DCR-TRV418          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV418          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV418          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV430          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV430          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV430          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV460          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV460          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV460          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV480          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV480          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV480          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV50           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV50           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV50           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV510          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV510          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV510          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV520          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV520          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV520          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV530          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV530          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV530          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV60           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV60           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV60           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV620          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV620          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV620          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV70           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV70           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV70           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV720          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV720          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV720          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV725          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV725          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV725          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV730          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV730          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV730          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV738          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV738          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV738          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV740          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV740          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV740          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV748          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV748          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV748          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV80           | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV80           | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV80           | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV820          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV820          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV820          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV828          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV828          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV828          | NP-QM91/D               | HL-IQM91              |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | CAMCORDER          | DCR-TRV830          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV830          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV830          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV840          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV840          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV840          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TRV890          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV890          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV890          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV900          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TRV900          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TRV900          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TRV950          | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | DCR-TRV950          | NP-QM71/D               | HL-IQM71              |
| Sony          | CAMCORDER          | DCR-TRV950          | NP-QM91/D               | HL-IQM91              |
| Sony          | CAMCORDER          | DCR-TVX1000         | NP-F750VX               | HL-750VX              |
| Sony          | CAMCORDER          | DCR-TVX2000         | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TVX2000         | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TVX2000         | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-TVX700          | NP-F750VX               | HL-750VX              |
| Sony          | CAMCORDER          | DCR-TVX9000         | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-TVX9000         | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-TVX9000         | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-VX2000          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-VX2000          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-VX2000          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-VX2100          | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-VX2100          | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-VX2100          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DCR-VX700           | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | DCR-VX700           | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | DCR-VX700           | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | DVR-DVD150          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | DVR-DVD150          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | DVR-DVD150          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | GV-D1000            | NP-FM50                 | HL-IQM51              |
| Sony          | CAMCORDER          | GV-D200 WALKMAN     | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | GV-D900             | NP-F530/F550/F570       | HL-XL581              |
| Sony          | CAMCORDER          | GV-D900             | NP-F730/F750/F770       | HL-XL782              |
| Sony          | CAMCORDER          | GV-D900             | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | HDR -TG1            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | HDR-AX2000          | NP-F930/F950/F970       | HL-XL982              |
| Sony          | CAMCORDER          | HDR-CX100           | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | HDR-CX105E          | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | HDR-CX105E          | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | HDR-CX105E          | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | HDR-CX12            | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | HDR-CX12            | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | HDR-CX12            | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | HDR-CX500           | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | HDR-CX500           | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | HDR-CX500           | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | HDR-CX520           | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | HDR-CX520           | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | HDR-CX520           | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | HDR-CX520VE         | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | HDR-CX520VE         | NP-FH50                 | HL-XH50               |
| Sony          | CAMCORDER          | HDR-CX520VE         | NP-FH70                 | HL-XH70               |
| Sony          | CAMCORDER          | HDR-CX7             | NP-FH100                | HL-XH100              |
| Sony          | CAMCORDER          | HDR-CX7             | NP-FH50                 | HL-XH50               |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b>   | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|-----------------------|-------------------------|-----------------------|
| <b>Sony</b>   | CAMCORDER          | <b>HDR-CX7</b>        | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-FX1000 PRO</b> | NP-F530/F550/F570       | <b>HL-XL581</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-FX1000 PRO</b> | NP-F730/F750/F770       | <b>HL-XL782</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-FX1000 PRO</b> | NP-F930/F950/F970       | <b>HL-XL982</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-HC3</b>        | NP-FP50                 | <b>HL-XP50A</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-HC5</b>        | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-HC5</b>        | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-HC5</b>        | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-HC7</b>        | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-HC7</b>        | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-HC7</b>        | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-HC9</b>        | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-HC9</b>        | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-HC9</b>        | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR10</b>       | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR10</b>       | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR10</b>       | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR11</b>       | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR11</b>       | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR11</b>       | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR12</b>       | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR12</b>       | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR12</b>       | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR5</b>        | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR5</b>        | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR5</b>        | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR5C</b>       | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR5C</b>       | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-SR5C</b>       | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-TG1</b>        | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-TG1</b>        | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-TG1</b>        | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-TG1</b>        | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-TG3E</b>       | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-TG7E</b>       | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX10</b>       | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX10</b>       | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX10</b>       | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX3</b>        | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX3</b>        | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX3</b>        | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX5</b>        | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX5</b>        | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX5</b>        | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX7</b>        | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX7</b>        | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-UX7</b>        | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR105E</b>     | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR105E</b>     | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR105E</b>     | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR200VE</b>    | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR200VE</b>    | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR200VE</b>    | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR500V</b>     | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR500V</b>     | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR500V</b>     | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR520V</b>     | NP-FH100                | <b>HL-XH100</b>       |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR520V</b>     | NP-FH50                 | <b>HL-XH50</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HDR-XR520V</b>     | NP-FH70                 | <b>HL-XH70</b>        |
| <b>Sony</b>   | CAMCORDER          | <b>HVR-A1E PRO</b>    | NP-QM91/D               | <b>HL-IQM91</b>       |

| Vendor | Camera Type   | Camera Model      | Original Battery  | Hahnel Battery    |
|--------|---------------|-------------------|-------------------|-------------------|
| Sony   | CAMCORDER     | HVR-A1U PRO       | NP-FM50           | HL-IQM51          |
| Sony   | CAMCORDER     | HVR-A1U PRO       | NP-QM71/D         | HL-IQM71          |
| Sony   | CAMCORDER     | HVR-A1U PRO       | NP-QM91/D         | HL-IQM91          |
| Sony   | CAMCORDER     | HVR-HD1000        | NP-F930/F950/F970 | HL-XL982          |
| Sony   | CAMCORDER     | HVR-V1            | NP-F930/F950/F970 | HL-XL982          |
| Sony   | CAMCORDER     | HVR-X7U PRO       | NP-F530/F550/F570 | HL-XL581          |
| Sony   | CAMCORDER     | HVR-X7U PRO       | NP-F730/F750/F770 | HL-XL782          |
| Sony   | CAMCORDER     | HVR-X7U PRO       | NP-F930/F950/F970 | HL-XL982          |
| Sony   | CAMCORDER     | HVR-Z7U PRO       | NP-F930/F950/F970 | HL-XL982          |
| Sony   | CAMCORDER     | MHS-CM1           | NP-BK1            | HL-K1             |
| Sony   | CAMCORDER     | MHS-CM5           | NP-BK1            | HL-K1             |
| Sony   | CAMCORDER     | MHS-PM1           | NP-BK1            | HL-K1             |
| Sony   | CAMCORDER     | MHS-PM1 WEBBIE HD | NP-BK1            | HL-K1             |
| Sony   | CAMCORDER     | MHS-PM5           | NP-BK1            | HL-K1             |
| Sony   | CAMCORDER     | WEBBIE HD         | NP-BK1            | HL-K1             |
| Sony   | DIGITALCAMERA | Alpha A230 SLR    | NP-FH50           | HL-XH50           |
| Sony   | DIGITALCAMERA | Alpha A330 SLR    | NP-FH50           | HL-XH50           |
| Sony   | DIGITALCAMERA | Alpha A380 SLR    | NP-FH50           | HL-XH50           |
| Sony   | DIGITALCAMERA | Alpha A500 SLR    | NP-FM500          | HL-XM500          |
| Sony   | DIGITALCAMERA | Alpha A550 SLR    | NP-FM500          | HL-XM500          |
| Sony   | DIGITALCAMERA | Alpha A850 SLR    | NP-FM500          | HL-XM500          |
| Sony   | DIGITALCAMERA | ALPHA DSLR-350    | NP-FM500          | HL-XM500          |
| Sony   | DIGITALCAMERA | Alpha DSLR-A100   | NP-FM55H          | HL-XM55H          |
| Sony   | DIGITALCAMERA | Alpha DSLR-A100K  | NP-FM55H          | HL-XM55H          |
| Sony   | DIGITALCAMERA | ALPHA DSLR-A200   | NP-FM500          | HL-XM500          |
| Sony   | DIGITALCAMERA | ALPHA DSLR-A300   | NP-FM500          | HL-XM500          |
| Sony   | DIGITALCAMERA | ALPHA DSLR-A700   | NP-FM500          | HL-XM500          |
| Sony   | DIGITALCAMERA | ALPHA DSLR-A900   | NP-FM500          | HL-XM500          |
| Sony   | DIGITALCAMERA | DSC-10            | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-43            | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-D700          | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | DSC-D770          | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | DSC-F505          | NP-F10/FS11       | HL-XS11           |
| Sony   | DIGITALCAMERA | DSC-F55           | NP-F10/FS11       | HL-XS11           |
| Sony   | DIGITALCAMERA | DSC-F707          | NP-FM50           | HL-IQM51          |
| Sony   | DIGITALCAMERA | DSC-F717          | NP-FM50           | HL-IQM51          |
| Sony   | DIGITALCAMERA | DSC-F77           | NP-FC10/FC11      | HL-IC10           |
| Sony   | DIGITALCAMERA | DSC-F828          | NP-FM50           | HL-IQM51          |
| Sony   | DIGITALCAMERA | DSC-F88           | NP-FR1            | HL-XR1P           |
| Sony   | DIGITALCAMERA | DSC-FX77          | NP-FC10/FC11      | HL-IC10           |
| Sony   | DIGITALCAMERA | DSC-G1            | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-G3            | NP-BD1            | HL-D1             |
| Sony   | DIGITALCAMERA | DSC-H1            | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-H10           | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-H2            | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-H20           | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-H3            | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-H50           | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-H55           | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-H7            | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-H9            | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-HX1           | NP-FH50           | HL-XH50           |
| Sony   | DIGITALCAMERA | DSC-HX5           | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-L1            | NP-FT1            | HL-XT1C           |
| Sony   | DIGITALCAMERA | DSC-M1            | NP-FT1            | HL-XT1C           |
| Sony   | DIGITALCAMERA | DSC-M2            | NP-FT1            | HL-XT1C           |
| Sony   | DIGITALCAMERA | DSC-N1            | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-N2            | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-P1            | NP-F10/FS11       | HL-XS11           |
| Sony   | DIGITALCAMERA | DSC-P10           | NP-FC10/FC11      | HL-IC10           |

| <b>Vendor</b> | <b>Camera Type</b> | <b>Camera Model</b> | <b>Original Battery</b> | <b>Hahnel Battery</b> |
|---------------|--------------------|---------------------|-------------------------|-----------------------|
| Sony          | DIGITALCAMERA      | DSC-P100            | NP-FR1                  | HL-XR1P               |
| Sony          | DIGITALCAMERA      | DSC-P11             | NP-FC10/FC11            | HL-IC10               |
| Sony          | DIGITALCAMERA      | DSC-P12             | NP-FC10/FC11            | HL-IC10               |
| Sony          | DIGITALCAMERA      | DSC-P120            | NP-FM50                 | HL-IQM51              |
| Sony          | DIGITALCAMERA      | DSC-P2              | NP-FC10/FC11            | HL-IC10               |
| Sony          | DIGITALCAMERA      | DSC-P20             | AA                      | Go                    |
| Sony          | DIGITALCAMERA      | DSC-P200            | NP-FR1                  | HL-XR1P               |
| Sony          | DIGITALCAMERA      | DSC-P3              | NP-FC10/FC11            | HL-IC10               |
| Sony          | DIGITALCAMERA      | DSC-P30             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P31             | AA                      | Go                    |
| Sony          | DIGITALCAMERA      | DSC-P32             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P41             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P43             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P5              | NP-FC10/FC11            | HL-IC10               |
| Sony          | DIGITALCAMERA      | DSC-P50             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P51             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P52             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P7              | NP-FC10/FC11            | HL-IC10               |
| Sony          | DIGITALCAMERA      | DSC-P70             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P71             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P72             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P73             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P8              | NP-FC10/FC11            | HL-IC10               |
| Sony          | DIGITALCAMERA      | DSC-P9              | NP-FC10/FC11            | HL-IC10               |
| Sony          | DIGITALCAMERA      | DSC-P92             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-P93             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-R1              | NP-FM50                 | HL-IQM51              |
| Sony          | DIGITALCAMERA      | DSC-S2000           | AA                      | Go                    |
| Sony          | DIGITALCAMERA      | DSC-S2100           | AA                      | Go                    |
| Sony          | DIGITALCAMERA      | DSC-S30             | NP-FM50                 | HL-IQM51              |
| Sony          | DIGITALCAMERA      | DSC-S40             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-S50             | NP-FM50                 | HL-IQM51              |
| Sony          | DIGITALCAMERA      | DSC-S60             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-S600            | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-S650            | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-S70             | NP-FM50                 | HL-IQM51              |
| Sony          | DIGITALCAMERA      | DSC-S700            | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-S75             | NP-FM50                 | HL-IQM51              |
| Sony          | DIGITALCAMERA      | DSC-S750            | NP-BK1                  | HL-K1                 |
| Sony          | DIGITALCAMERA      | DSC-S780            | NP-BK1                  | HL-K1                 |
| Sony          | DIGITALCAMERA      | DSC-S80             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-S800            | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-S85             | NP-FM50                 | HL-IQM51              |
| Sony          | DIGITALCAMERA      | DSC-S90             | AA                      | AA Mignon 2700mAh     |
| Sony          | DIGITALCAMERA      | DSC-S950            | NP-BK1                  | HL-K1                 |
| Sony          | DIGITALCAMERA      | DSC-S980            | NP-BK1                  | HL-K1                 |
| Sony          | DIGITALCAMERA      | DSC-T1              | NP-FT1                  | HL-XT1C               |
| Sony          | DIGITALCAMERA      | DSC-T10             | NP-FT1                  | HL-XT1C               |
| Sony          | DIGITALCAMERA      | DSC-T100            | NP-FG1 & NP-BG1         | HL-G1                 |
| Sony          | DIGITALCAMERA      | DSC-T11             | NP-FT1                  | HL-XT1C               |
| Sony          | DIGITALCAMERA      | DSC-T2              | NP-BD1                  | HL-D1                 |
| Sony          | DIGITALCAMERA      | DSC-T20             | NP-FG1 & NP-BG1         | HL-G1                 |
| Sony          | DIGITALCAMERA      | DSC-T200            | NP-BD1                  | HL-D1                 |
| Sony          | DIGITALCAMERA      | DSC-T3              | NP-FT1                  | HL-XT1C               |
| Sony          | DIGITALCAMERA      | DSC-T30             | NP-FR1                  | HL-XR1P               |
| Sony          | DIGITALCAMERA      | DSC-T300            | NP-BD1                  | HL-D1                 |
| Sony          | DIGITALCAMERA      | DSC-T33             | NP-FT1                  | HL-XT1C               |
| Sony          | DIGITALCAMERA      | DSC-T5              | NP-FT1                  | HL-XT1C               |
| Sony          | DIGITALCAMERA      | DSC-T50             | NP-FR1                  | HL-XR1P               |
| Sony          | DIGITALCAMERA      | DSC-T500            | NP-BD1                  | HL-D1                 |

| Vendor | Camera Type   | Camera Model         | Original Battery  | Hahnel Battery    |
|--------|---------------|----------------------|-------------------|-------------------|
| Sony   | DIGITALCAMERA | DSC-T70              | NP-BD1            | HL-D1             |
| Sony   | DIGITALCAMERA | DSC-T700             | NP-BD1            | HL-D1             |
| Sony   | DIGITALCAMERA | DSC-T77              | NP-BD1            | HL-D1             |
| Sony   | DIGITALCAMERA | DSC-T77B / G / P / T | NP-BD1            | HL-D1             |
| Sony   | DIGITALCAMERA | DSC-T9               | NP-FT1            | HL-XT1C           |
| Sony   | DIGITALCAMERA | DSC-T90              | NP-BD1            | HL-D1             |
| Sony   | DIGITALCAMERA | DSC-T900             | NP-BD1            | HL-D1             |
| Sony   | DIGITALCAMERA | DSC-TX1              | NP-BD1            | HL-D1             |
| Sony   | DIGITALCAMERA | DSC-U10              | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-U20              | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-U30              | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-U40              | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-U50              | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-U60              | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-V1               | NP-FC10/FC11      | HL-IC10           |
| Sony   | DIGITALCAMERA | DSC-V3               | NP-FR1            | HL-XR1P           |
| Sony   | DIGITALCAMERA | DSC-W1               | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-W180             | NP-BK1            | HL-K1             |
| Sony   | DIGITALCAMERA | DSC-W200             | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-W210             | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-W220             | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-W230             | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-W290             | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-W30              | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-W300             | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-W35              | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-W5               | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-W50              | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-W55              | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-W7               | AA                | AA Mignon 2700mAh |
| Sony   | DIGITALCAMERA | DSC-W80              | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-W90              | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSC-WX1              | NP-FG1 & NP-BG1   | HL-G1             |
| Sony   | DIGITALCAMERA | DSLR-A450 SLR        | NP-FM500          | HL-XM500          |
| Sony   | DIGITALCAMERA | GVH-D700 WALKMAN     | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-CD1000           | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-CD200            | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-CD250            | NP-FM50           | HL-IQM51          |
| Sony   | DIGITALCAMERA | MVC-CD300            | NP-FM50           | HL-IQM51          |
| Sony   | DIGITALCAMERA | MVC-CD350            | NP-FM50           | HL-IQM51          |
| Sony   | DIGITALCAMERA | MVC-CD400            | NP-FM50           | HL-IQM51          |
| Sony   | DIGITALCAMERA | MVC-CD500            | NP-FM50           | HL-IQM51          |
| Sony   | DIGITALCAMERA | MVC-FD200            | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD5              | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD51             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD7              | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD71             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD73             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD75             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD81             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD83             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD85             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD87             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD88             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD90             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD91             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD92             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD95             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FD97             | NP-F530/F550/F570 | HL-XL581          |
| Sony   | DIGITALCAMERA | MVC-FDR1             | NP-F530/F550/F570 | HL-XL581          |

| <b>Vendor</b>    | <b>Camera Type</b> | <b>Camera Model</b>    | <b>Original Battery</b> | <b>Hahnel Battery</b>    |
|------------------|--------------------|------------------------|-------------------------|--------------------------|
| <b>Sony</b>      | DIGITALCAMERA      | <b>MVC-FDR3</b>        | NP-F530/F550/F570       | <b>HL-XL581</b>          |
| <b>Sony</b>      | DIGITALCAMERA      | <b>W120</b>            | NP-FG1 & NP-BG1         | <b>HL-G1</b>             |
| <b>Sony</b>      | DIGITALCAMERA      | <b>W170</b>            | NP-FG1 & NP-BG1         | <b>HL-G1</b>             |
| <b>Thomson</b>   | CAMCORDER          | <b>VMD 160 MS</b>      | BN-V507                 | <b>HL-507</b>            |
| <b>Thomson</b>   | CAMCORDER          | <b>VM-D8</b>           | BN-V507                 | <b>HL-507</b>            |
| <b>Thomson</b>   | CAMCORDER          | <b>VM-D9</b>           | BN-V507                 | <b>HL-507</b>            |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-2300</b>        | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-3300</b>        | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-3320</b>        | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-5300</b>        | NP-60                   | <b>HL-F60</b>            |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M1</b>          | NP-80                   | <b>HL-F80</b>            |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M11</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M21</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M25</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M3</b>          | NP-100                  | <b>HL-F100</b>           |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M4</b>          | NP-80                   | <b>HL-F80</b>            |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M5</b>          | NP-80                   | <b>HL-F80</b>            |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M60</b>         | AA                      | <b>Go</b>                |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M61</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M65</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M70</b>         | NP-80                   | <b>HL-F80</b>            |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M71</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-M81</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-T10</b>         | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-T20</b>         | NP-60                   | <b>HL-F60</b>            |
| <b>Toshiba</b>   | DIGITALCAMERA      | <b>PDR-T30</b>         | NP-60                   | <b>HL-F60</b>            |
| <b>Traveller</b> | DIGITALCAMERA      | <b>DC-5300</b>         | NP-60                   | <b>HL-F60</b>            |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>DVR310</b>          | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>DVR390H</b>         | NP-120                  | <b>HL-F120</b>           |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3625</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3650</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3695</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3705</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3710</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3715</b>           | AA                      | <b>AA Mignon 2350mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3715</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3750</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3755</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3760</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3785</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3805</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3815</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3826</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3835</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3930</b>           | NP-60                   | <b>HL-F60</b>            |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V3945s</b>          | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V4000</b>           | NP-60                   | <b>HL-F60</b>            |
| <b>Vivitar</b>   | DIGITALCAMERA      | <b>V5385</b>           | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Yakumo</b>    | DIGITALCAMERA      | <b>Mega-Image 47SL</b> | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Yakumo</b>    | DIGITALCAMERA      | <b>Mega-Image 57</b>   | AA                      | <b>AA Mignon 2700mAh</b> |
| <b>Yakumo</b>    | DIGITALCAMERA      | <b>Mega-Image 610X</b> | AA                      | <b>AA Mignon 2700mAh</b> |